



OWNER'S MANUAL

**⚠ Read this manual carefully
before operating this vehicle.**

MT-07

MOTORCYCLE

MTN690/MTN690-U (MT-07)

BTK-28199-E1

| | |
|--|-----------|
| Safety information | 1 |
| Description | 2 |
| Special features | 3 |
| Instrument and control functions | 4 |
| For your safety – pre-operation checks | 5 |
| Operation and important riding points | 6 |
| Periodic maintenance and adjustment | 7 |
| Motorcycle care and storage | 8 |
| Specifications | 9 |
| Consumer information | 10 |
| Index | 11 |

 **Read this manual carefully before operating this vehicle. This manual should stay with this vehicle if it is sold.**

For Europe

Declaration of Conformity:

Hereby, YAMAHA MOTOR ELECTRONICS Co., Ltd declares that the radio equipment type, IMMOBILIZER, BAT-00 is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

https://global.yamaha-motor.com/eu_doc/

Frequency band: 134.2 kHz

The maximum radio frequency power: 49.0 [dB μ V/m]

Manufacturer:

YAMAHA MOTOR ELECTRONICS Co., Ltd

1450-6 Mori, Mori-machi, Shuchi-Gun, Shizuoka, 437-0292 Japan

Importer:

YAMAHA MOTOR EUROPE N.V.

Koolhovenlaan 101, 1119 NC Schiphol-Rijk, 1117 ZN, Schiphol, the Netherlands

For UK

**UK
CA**

Declaration of Conformity:

Hereby, YAMAHA MOTOR ELECTRONICS Co., Ltd declares that the radio equipment type, IMMOBILIZER, BAT-00 is in compliance with the Radio Equipment Regulations 2017.

The full text of the declaration of conformity is available at the following internet address:

https://global.yamaha-motor.com/eu_doc/

Frequency band: 134.2 kHz

The maximum radio frequency power: 49.0 [dB μ V/m]

Manufacturer:

YAMAHA MOTOR ELECTRONICS Co., Ltd

1450-6 Mori, Mori-machi, Shuchi-Gun, Shizuoka, 437-0292 Japan

Importer:

YAMAHA MOTOR EUROPE N.V., BRANCH UK

Units A2-A3, Kingswey Business Park, Forsyth Road, Woking, Surrey. GU21 5SA. United Kingdom.

For Europe

Declaration of Conformity:

Hereby, YAMAHA MOTOR CO., LTD declares that the radio equipment type, Communication Control Unit, Y08U-A00 is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

https://global.yamaha-motor.com/eu_doc/

Frequency band: 2402~2480 MHz

The maximum radio frequency power:

Bluetooth 4.2 2.75 dBm 1.88 mW

Bluetooth 5.0 2.59 dBm 1.82 mW

Manufacturer:

PT Chao Long Motor Parts Indonesia

JL.MERANTI 1 BLOK, L2 NO. 5-6 DELTA SILICON INDUSTRIAL

PARK LIPPO CIKARANG BEKASI 17550, INDONESIA

Importer:

YAMAHA MOTOR EUROPE N.V.

Koolhovenlaan 101, 1119 NC Schiphol-Rijk, 1117 ZN, Schiphol, the Netherlands

For UK

**UK
CA**

Declaration of Conformity:

Hereby, YAMAHA MOTOR CO., LTD declares that the radio equipment type, Communication Control Unit, Y08U-A00 is in compliance with the Radio Equipment Regulations 2017.

The full text of the declaration of conformity is available at the following internet address:

https://global.yamaha-motor.com/eu_doc/

Frequency band: 2402~2480 MHz

The maximum radio frequency power:

Bluetooth 4.2 2.75 dBm 1.88 mW

Bluetooth 5.0 2.59 dBm 1.82 mW

Manufacturer:

PT Chao Long Motor Parts Indonesia

JL.MERANTI 1 BLOK, L2 NO. 5-6 DELTA SILICON INDUSTRIAL

PARK LIPPO CIKARANG BEKASI 17550, INDONESIA

Importer:

YAMAHA MOTOR EUROPE N.V., BRANCH UK

Units A2-A3, Kingswey Business Park, Forsyth Road, Woking, Surrey. GU21 5SA. United Kingdom.

Introduction

EAU10103

Welcome to the Yamaha world of motorcycling!

As the owner of the MTN690 / MTN690-U, you are benefiting from Yamaha's vast experience and newest technology regarding the design and manufacture of high-quality products, which have earned Yamaha a reputation for dependability.

Please take the time to read this manual thoroughly, so as to enjoy all advantages of your MTN690 / MTN690-U. The Owner's Manual does not only instruct you in how to operate, inspect and maintain your motorcycle, but also in how to safeguard yourself and others from trouble and injury.

In addition, the many tips given in this manual will help keep your motorcycle in the best possible condition. If you have any further questions, do not hesitate to contact your Yamaha dealer.

The Yamaha team wishes you many safe and pleasant rides. So, remember to put safety first!

Yamaha continually seeks advancements in product design and quality. Therefore, while this manual contains the most current product information available at the time of printing, there may be minor discrepancies between your motorcycle and this manual. If there is any question concerning this manual, please consult a Yamaha dealer.

EWA10032






Please read this manual carefully and completely before operating this motorcycle.

Important manual information

EAU10134

Particularly important information is distinguished in this manual by the following notations:

| | |
|---|---|
|  | This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death. |
|  | A WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury. |
|  | A NOTICE indicates special precautions that must be taken to avoid damage to the vehicle or other property. |
| TIP | A TIP provides key information to make procedures easier or clearer. |

*Product and specifications are subject to change without notice.

Important manual information

EAU10202

**MTN690 / MTN690-U
OWNER'S MANUAL**
©2024 by Yamaha Motor Co., Ltd.
1st edition, August 2023
All rights reserved.
Any reprinting or unauthorized use
without the written permission of
Yamaha Motor Co., Ltd.
is expressly prohibited.
Printed in Japan.

Table of contents

| | | | | | |
|---|------|--|------|---|------|
| Safety information | 1-1 | Adjusting the shock absorber assembly | 4-24 | Coolant..... | 7-10 |
| Description | 2-1 | Luggage strap holders..... | 4-26 | Replacing the air filter element and cleaning the check hose | 7-12 |
| Left view | 2-1 | DC connectors | 4-26 | Checking the engine idling speed ... | 7-12 |
| Right view | 2-2 | Sidestand | 4-27 | Checking the throttle grip free play | 7-13 |
| Controls and instruments | 2-3 | Ignition circuit cut-off system..... | 4-27 | Valve clearance | 7-13 |
| Special features | 3-1 | For your safety – pre-operation checks | 5-1 | Tires | 7-13 |
| Quick shifter (if equipped) | 3-1 | Operation and important riding points | 6-1 | Cast wheels..... | 7-16 |
| CCU (Communication Control Unit) | 3-1 | Engine break-in | 6-1 | Adjusting the clutch lever free play | 7-16 |
| Instrument and control functions | 4-1 | Starting the engine | 6-2 | Checking the brake lever free play | 7-17 |
| Immobilizer system | 4-1 | Shifting | 6-3 | Brake light switches..... | 7-17 |
| Main switch/steering lock | 4-2 | Tips for reducing fuel consumption..... | 6-4 | Checking the front and rear brake pads | 7-18 |
| Handlebar switches..... | 4-3 | Parking | 6-4 | Checking the brake fluid level | 7-18 |
| Indicator lights and warning lights | 4-5 | Periodic maintenance and adjustment | 7-1 | Changing the brake fluid | 7-20 |
| Main display screen | 4-6 | Tool kits | 7-2 | Drive chain slack..... | 7-20 |
| Menu system | 4-12 | Periodic maintenance charts | 7-3 | Cleaning and lubricating the drive chain..... | 7-22 |
| Clutch lever | 4-16 | Periodic maintenance chart for the emission control system..... | 7-3 | Checking and lubricating the cables | 7-22 |
| Shift pedal | 4-16 | General maintenance and lubrication chart | 7-4 | Checking and lubricating the throttle grip and cable | 7-23 |
| Brake lever | 4-16 | Checking the spark plugs | 7-8 | Checking and lubricating the brake and shift pedals | 7-23 |
| Brake pedal | 4-17 | Canister..... | 7-9 | Checking and lubricating the brake and clutch levers | 7-24 |
| ABS | 4-17 | Engine oil..... | 7-9 | Checking and lubricating the sidestand | 7-24 |
| Fuel tank cap | 4-18 | Why Yamalube | 7-10 | | |
| Fuel | 4-19 | | | | |
| Fuel tank overflow hose | 4-20 | | | | |
| Catalytic converter | 4-21 | | | | |
| Seats | 4-21 | | | | |
| Helmet holding cable | 4-23 | | | | |

Table of contents

| | |
|--|-------------|
| Lubricating the swingarm pivots | 7-25 |
| Checking the front fork | 7-25 |
| Checking the steering | 7-26 |
| Checking the wheel bearings..... | 7-26 |
| Battery..... | 7-26 |
| Replacing the fuses | 7-29 |
| Vehicle lights | 7-30 |
| Replacing a license plate light bulb..... | 7-30 |
| Supporting the motorcycle | 7-31 |
| Troubleshooting | 7-31 |
| Troubleshooting chart..... | 7-33 |
| Motorcycle care and storage | 8-1 |
| Matte color caution..... | 8-1 |
| Care..... | 8-1 |
| Storage | 8-4 |
| Specifications | 9-1 |
| Consumer information | 10-1 |
| Identification numbers..... | 10-1 |
| Diagnostic connector | 10-2 |
| Use of your data..... | 10-3 |
| Index | 11-1 |

EAU1028C

Be a Responsible Owner

As the vehicle's owner, you are responsible for the safe and proper operation of your motorcycle.

Motorcycles are single-track vehicles. Their safe use and operation are dependent upon the use of proper riding techniques as well as the expertise of the operator. Every operator should know the following requirements before riding this motorcycle.

He or she should:

- Obtain thorough instructions from a competent source on all aspects of motorcycle operation.
- Observe the warnings and maintenance requirements in this Owner's Manual.
- Obtain qualified training in safe and proper riding techniques.
- Obtain professional technical service as indicated in this Owner's Manual and/or when made necessary by mechanical conditions.

- Never operate a motorcycle without proper training or instruction. Take a training course. Beginners should receive training from a certified instructor. Contact an authorized motorcycle dealer to find out about the training courses nearest you.

Safe Riding

Perform the pre-operation checks each time you use the vehicle to make sure it is in safe operating condition. Failure to inspect or maintain the vehicle properly increases the possibility of an accident or equipment damage. See page 5-1 for a list of pre-operation checks.

- This motorcycle is designed to carry the operator and a passenger.
- The failure of motorists to detect and recognize motorcycles in traffic is the predominating cause of automobile/motorcycle accidents. Many accidents have been caused by an automobile driver who did not see the motorcycle. Making yourself conspicuous appears to

be very effective in reducing the chance of this type of accident.

Therefore:

- Wear a brightly colored jacket.
- Use extra caution when you are approaching and passing through intersections, since intersections are the most likely places for motorcycle accidents to occur.
- Ride where other motorists can see you. Avoid riding in another motorist's blind spot.
- Never maintain a motorcycle without proper knowledge. Contact an authorized motorcycle dealer to inform you on basic motorcycle maintenance. Certain maintenance can only be carried out by certified staff.
- Many accidents involve inexperienced operators. In fact, many operators who have been involved in accidents do not even have a current motorcycle license.
- Make sure that you are qualified and that you only lend your motorcycle to other qualified operators.

Safety information

1

- Know your skills and limits. Staying within your limits may help you to avoid an accident.
- We recommend that you practice riding your motorcycle where there is no traffic until you have become thoroughly familiar with the motorcycle and all of its controls.
- Many accidents have been caused by error of the motorcycle operator. A typical error made by the operator is veering wide on a turn due to excessive speed or undercornering (insufficient lean angle for the speed).
 - Always obey the speed limit and never travel faster than warranted by road and traffic conditions.
 - Always signal before turning or changing lanes. Make sure that other motorists can see you.
- The posture of the operator and passenger is important for proper control.
 - The operator should keep both hands on the handlebar and both feet on the operator footrests during operation to maintain control of the motorcycle.
- The passenger should always hold onto the operator, the seat strap or grab bar, if equipped, with both hands and keep both feet on the passenger footrests. Never carry a passenger unless he or she can firmly place both feet on the passenger footrests.
- Never ride under the influence of alcohol or other drugs.
- This motorcycle is designed for on-road use only. It is not suitable for off-road use.

Protective Apparel

The majority of fatalities from motorcycle accidents are the result of head injuries. The use of a safety helmet is the single most critical factor in the prevention or reduction of head injuries.

- Always wear an approved helmet.
- Wear a face shield or goggles. Wind in your unprotected eyes could contribute to an impairment of vision that could delay seeing a hazard.

- The use of a jacket, heavy boots, trousers, gloves, etc., is effective in preventing or reducing abrasions or lacerations.
- Never wear loose-fitting clothes, otherwise they could catch on the control levers, footrests, or wheels and cause injury or an accident.
- Always wear protective clothing that covers your legs, ankles, and feet. The engine or exhaust system become very hot during or after operation and can cause burns.
- A passenger should also observe the above precautions.

Avoid Carbon Monoxide Poisoning

All engine exhaust contains carbon monoxide, a deadly gas. Breathing carbon monoxide can cause headaches, dizziness, drowsiness, nausea, confusion, and eventually death.

Carbon Monoxide is a colorless, odorless, tasteless gas which may be present even if you do not see or smell any engine exhaust. Deadly levels of carbon monoxide can collect rapidly and you can quickly be overcome and unable to save yourself. Also, deadly

levels of carbon monoxide can linger for hours or days in enclosed or poorly ventilated areas. If you experience any symptoms of carbon monoxide poisoning, leave the area immediately, get fresh air, and SEEK MEDICAL TREATMENT.

- Do not run engine indoors. Even if you try to ventilate engine exhaust with fans or open windows and doors, carbon monoxide can rapidly reach dangerous levels.
- Do not run engine in poorly ventilated or partially enclosed areas such as barns, garages, or carports.
- Do not run engine outdoors where engine exhaust can be drawn into a building through openings such as windows and doors.

Loading

Adding accessories or cargo to your motorcycle can adversely affect stability and handling if the weight distribution of the motorcycle is changed. To avoid the possibility of an accident, use extreme caution when adding cargo or accessories to your motorcycle. Use

extra care when riding a motorcycle that has added cargo or accessories. Here, along with the information about accessories below, are some general guidelines to follow if loading cargo to your motorcycle:

The total weight of the operator, passenger, accessories and cargo must not exceed the maximum load limit.

Operation of an overloaded vehicle could cause an accident.

| |
|---|
| <p>Maximum load: 171 kg (377 lb)</p> |
|---|

When loading within this weight limit, keep the following in mind:

- Cargo and accessory weight should be kept as low and close to the motorcycle as possible. Securely pack your heaviest items as close to the center of the vehicle as possible and make sure to distribute the weight as evenly as possible on both sides of the motorcycle to minimize imbalance or instability.
- Shifting weights can create a sudden imbalance. Make sure that ac-

cessories and cargo are securely attached to the motorcycle before riding. Check accessory mounts and cargo restraints frequently.

- Properly adjust the suspension for your load (suspension-adjustable models only), and check the condition and pressure of your tires.
- Never attach any large or heavy items to the handlebar, front fork, or front fender. These items, including such cargo as sleeping bags, duffel bags, or tents, can create unstable handling or a slow steering response.
- **This vehicle is not designed to pull a trailer or to be attached to a sidecar.**

Genuine Yamaha Accessories

Choosing accessories for your vehicle is an important decision. Genuine Yamaha accessories, which are available only from a Yamaha dealer, have been designed, tested, and approved by Yamaha for use on your vehicle.

Safety information

1

Many companies with no connection to Yamaha manufacture parts and accessories or offer other modifications for Yamaha vehicles. Yamaha is not in a position to test the products that these aftermarket companies produce. Therefore, Yamaha can neither endorse nor recommend the use of accessories not sold by Yamaha or modifications not specifically recommended by Yamaha, even if sold and installed by a Yamaha dealer.

Aftermarket Parts, Accessories, and Modifications

While you may find aftermarket products similar in design and quality to genuine Yamaha accessories, recognize that some aftermarket accessories or modifications are not suitable because of potential safety hazards to you or others. Installing aftermarket products or having other modifications performed to your vehicle that change any of the vehicle's design or operation characteristics can put you and others at greater risk of serious injury or death. You are responsible for injuries related to changes in the vehicle.

Keep the following guidelines in mind, as well as those provided under “Loading” when mounting accessories.

- Never install accessories or carry cargo that would impair the performance of your motorcycle. Carefully inspect the accessory before using it to make sure that it does not in any way reduce ground clearance or cornering clearance, limit suspension travel, steering travel or control operation, or obscure lights or reflectors.
- Accessories fitted to the handlebar or the front fork area can create instability due to improper weight distribution or aerodynamic changes. If accessories are added to the handlebar or front fork area, they must be as lightweight as possible and should be kept to a minimum.
- Bulky or large accessories may seriously affect the stability of the motorcycle due to aerodynamic effects. Wind may attempt to lift the motorcycle, or the motorcycle may become unstable in cross winds. These

accessories may also cause instability when passing or being passed by large vehicles.

- Certain accessories can displace the operator from his or her normal riding position. This improper position limits the freedom of movement of the operator and may limit control ability, therefore, such accessories are not recommended.
- Use caution when adding electrical accessories. If electrical accessories exceed the capacity of the motorcycle's electrical system, an electric failure could result, which could cause a dangerous loss of lights or engine power.

Aftermarket Tires and Rims

The tires and rims that came with your motorcycle were designed to match the performance capabilities and to provide the best combination of handling, braking, and comfort. Other tires, rims, sizes, and combinations may not be appropriate. See page 7-13 for tire specifications and for information on servicing and replacing your tires.

Transporting the Motorcycle

Be sure to observe following instructions before transporting the motorcycle in another vehicle.


- Remove all loose items from the motorcycle.
- Check that the fuel cock (if equipped) is in the off position and that there are no fuel leaks.
- Shift the transmission into gear (for models with a manual transmission).
- Secure the motorcycle with tie-downs or suitable straps that are attached to solid parts of the motorcycle, such as the frame or upper front fork triple clamp (and not, for example, to rubber-mounted handlebars or turn signals, or parts that could break). Choose the location for the straps carefully so the straps will not rub against painted surfaces during transport.
- The suspension should be compressed somewhat by the tie-downs, if possible, so that the motorcycle will not bounce excessively during transport.

Description

EAU10411


Left view

2

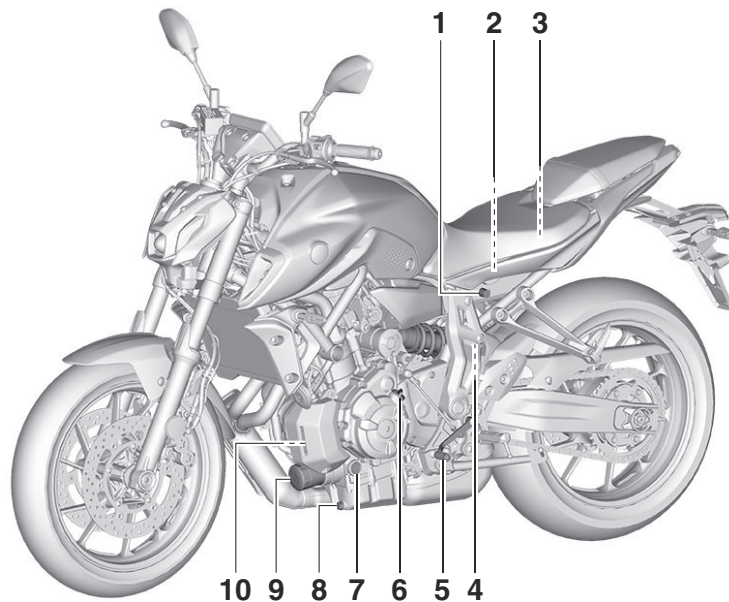

1. Seat lock (page 4-21)
2. Battery (page 7-26)
3. Fuses (page 7-29)
4. Rebound damping force adjuster (page 4-24)
5. Shift pedal (page 4-16)
6. Engine oil filler cap (page 7-9)
7. Engine oil level check window (page 7-9)
8. Engine oil drain bolt (page 7-9)
9. Engine oil filter cartridge (page 7-9)
10. Coolant reservoir (page 7-10)


Right view

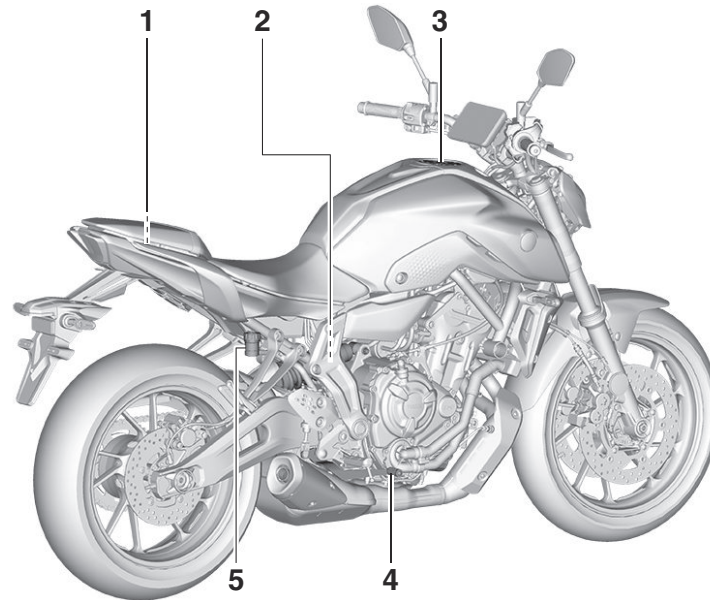

1. Tool kit (page 7-2)
2. Spring preload adjuster (page 4-24)
3. Fuel tank cap (page 4-18)
4. Brake pedal (page 4-17)
5. Rear brake fluid reservoir (page 7-18)

Controls and instruments

2

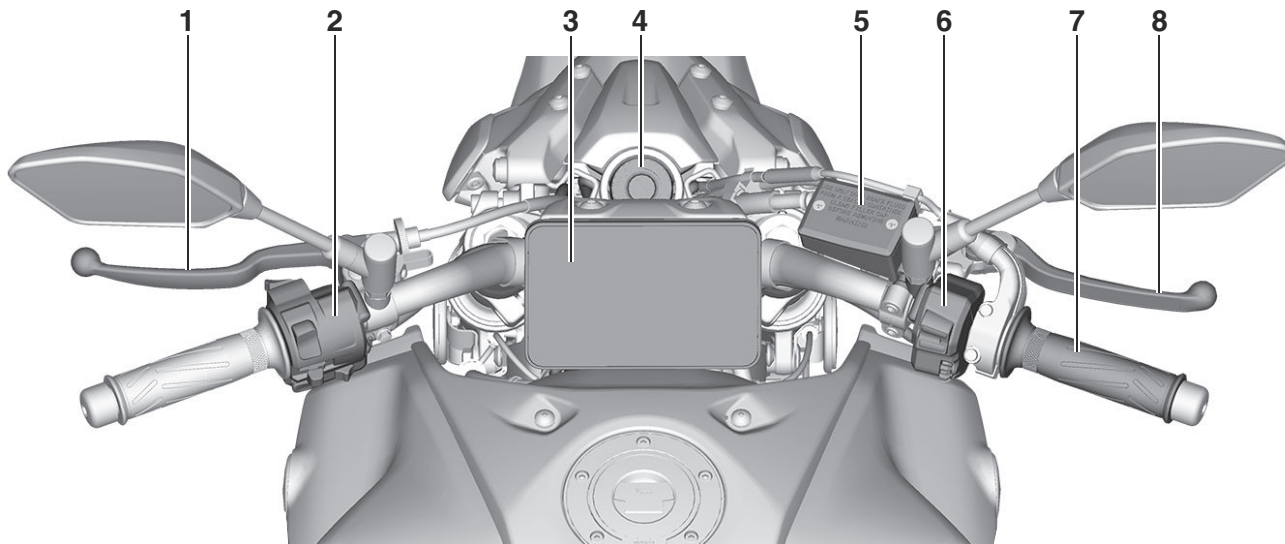

1. Clutch lever (page 4-16)
2. Left handlebar switches (page 4-3)
3. Multi-function meter unit (page 4-6)
4. Main switch/steering lock (page 4-2)
5. Front brake fluid reservoir (page 7-18)
6. Right handlebar switches (page 4-3)
7. Throttle grip (page 7-13)

8. Brake lever (page 4-16)

Quick shifter (if equipped)

EAUM4722

The quick shifter allows for full-throttle, clutch lever-less upshifts. When the shift switch detects motion in the shift pedal, engine power and drive torque are momentarily adjusted to allow the upshift to occur.

TIP

- The quick shifter operates when traveling at least 20 km/h (12 mi/h) with an engine speed of 2000 r/min or higher, and only when accelerating. It does not operate when the clutch lever is pulled.
- This system requires additional optional accessory parts to be activated. Contact your Yamaha dealer for details.

EAUA0210

CCU (Communication Control Unit)

This model is equipped with a CCU that allows your vehicle and smartphone to connect using Bluetooth wireless technology and the MyRide App.

With this connection, notifications from apps, incoming phone calls and missed calls are signaled to you, and the battery level of your smartphone is displayed.

EWAN0070

⚠ WARNING

- **Always stop the vehicle before operating your smartphone.**
- **Never take your hands off the handlebars while riding.**
- **Always concentrate on riding by keeping your eyes and mind on the road.**

ECAN0150

NOTICE

The Bluetooth connection may not work in the following situations.

- In a location exposed to strong radio waves or other electromagnetic noise.

- At facilities nearby that are emitting strong radio waves (TV or radio towers, power plants, broadcasting stations, airports, etc.).


Pairing the CCU and your smartphone

1. Install the MyRide App on your smartphone and activate it.

TIP

The MyRide App can be downloaded from an App store.

2. Remove the passenger seat (See page 4-21.).
3. Pull out the CCU and scan its QR code with the MyRide App.

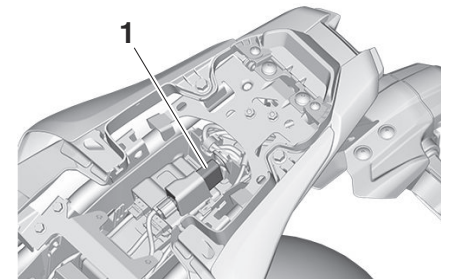

1. CCU (Communication Control Unit)

NOTICE

ECA26261

To prevent drivetrain damage, always use the clutch lever to shift when riding at slow speed, when downshifting, or if the quick shifter is off.

Special features

4. When pairing is complete, the App connect icon and smartphone battery level meter will come on.


TIP

3

- Once paired, the smartphone is registered in the CCU. The next time the vehicle is turned on and the MyRide App is active, the connection will be automatically executed.
 - Only one smartphone can be connected to the CCU at a time.
 - If more than one phone has been registered in the CCU, then the first phone within reach will be connected.
-

Immobilizer system

EAU1097B

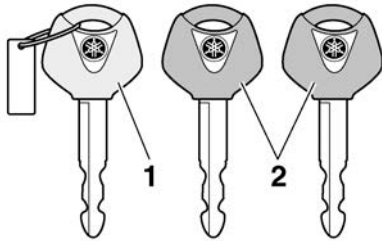

1. Code re-registering key (red bow)
2. Standard keys (black bow)

This vehicle is equipped with an immobilizer system to help prevent theft by re-registering codes in the standard keys. This system consists of the following:

- a code re-registering key
- two standard keys
- a transponder (in each key)
- an immobilizer unit (on the vehicle)
- an ECU (on the vehicle)
- a system indicator light (page 4-5)

About the keys

The code re-registering key is used to register codes in each standard key. Store the code re-registering key in a safe place. Use a standard key for daily operation.

When key replacement or re-registering is necessary, bring the vehicle and the code re-registering key along with any remaining standard keys to a Yamaha dealer to have them re-registered.

TIP

- Keep the standard keys as well as keys of other immobilizer systems away from the code re-registering key.
- Keep other immobilizer system keys away from the main switch as they may cause signal interference.

ECA11823

NOTICE

DO NOT LOSE THE CODE RE-REGISTERING KEY! CONTACT YOUR DEALER IMMEDIATELY IF IT IS LOST! If the code re-registering key is lost, the existing standard


keys can still be used to start the vehicle. However, registering a new standard key is impossible. If all keys have been lost or damaged, the entire immobilizer system must be replaced. Therefore, handle the keys carefully.

- Do not submerge in water.
- Do not expose to high temperatures.
- Do not place near magnets.
- Do not place near items that transmit electrical signals.
- Do not handle roughly.
- Do not grind or alter.
- Do not disassemble.
- Do not put two keys of any immobilizer system on the same key ring.

Instrument and control functions

Main switch/steering lock

EAU10474

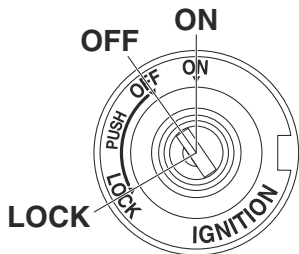

The main switch/steering lock controls the ignition and lighting systems, and is used to lock the steering. The various positions are described below.

TIP

Be sure to use the standard key (black bow) for regular use of the vehicle. To minimize the risk of losing the code re-registering key (red bow), keep it in a safe place and only use it for code re-registering.

EAU84035

ON

All electrical circuits are supplied with power and the vehicle lights are turned

on. The engine can be started. The key cannot be removed.

TIP

- The headlight(s) will turn on when the engine is started.
- To prevent battery drain, do not leave the key in the “ON” position without the engine running.

EAU10664

OFF

All electrical systems are off. The key can be removed.

EWA10062




WARNING
Never turn the key to “OFF” or “LOCK” while the vehicle is moving. Otherwise the electrical systems will be switched off, which may result in loss of control or an accident.

EAU73803

LOCK

The steering is locked and all electrical systems are off. The key can be removed.

To lock the steering

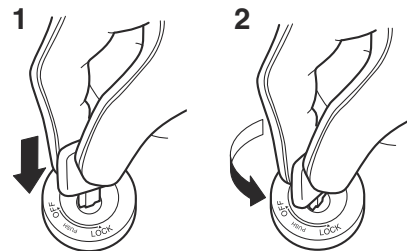


1. Push.
2. Turn.

1. Turn the handlebars all the way to the left.
2. With the key in the “OFF” position, push the key in and turn it to “LOCK”.
3. Remove the key.

TIP

If the steering will not lock, try turning the handlebars back to the right slightly.

To unlock the steering

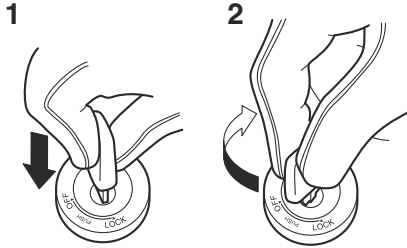


1. Push.
2. Turn.

Push the key in and turn it to "OFF".

Handlebar switches


EAU66059

Left

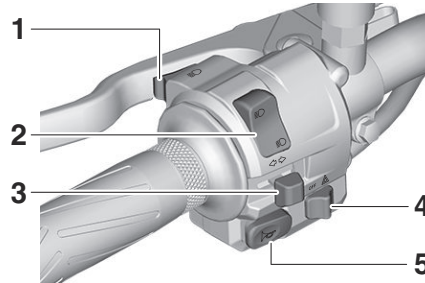

1. Pass switch "≡O"
2. Dimmer switch "≡O/≡O"
3. Turn signal switch "◁/▷"
4. Hazard switch "OFF/△"
5. Horn switch "📢"

Right

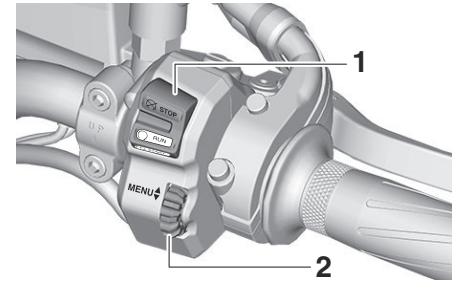

1. Stop/Run/Start switch "⊗/○/⊗"
2. Wheel switch "MENU↕"

4

EAU76731

Pass switch "≡O"

Press this switch to flash the headlights.

TIP

When the dimmer switch is set to "≡O", the passing switch has no effect.

EAU98390

Dimmer switch "≡O/≡O"



Set this switch to "≡O" for the high beam and to "≡O" for the low beam.

Instrument and control functions

4

Turn signal switch “”

EAU66040

To signal a right-hand turn, push this switch to “”. To signal a left-hand turn, push this switch to “”. When released, the switch returns to the center position. To cancel the turn signal lights, push the switch in after it has returned to the center position.



Horn switch “”


EAU66030

Press this switch to sound the horn.

Stop/Run/Start switch “”

EAU66061

To crank the engine with the starter, set this switch to “”, and then push the switch down towards “”. See page 6-2 for starting instructions prior to starting the engine.

Set this switch to “” to stop the engine in case of an emergency, such as when the vehicle overturns or when the throttle cable is stuck.

Hazard switch “OFF/”

EAU88273

Use this switch to turn on the hazard lights (simultaneous flashing of all turn

signal lights). The hazard lights are used in case of an emergency or to warn other drivers when your vehicle is stopped where it might be a traffic hazard.

The hazard lights can be turned on or off only when the main switch is in the “ON” position. You can turn the main switch to the “OFF” or “LOCK” position, and the hazard lights will continue to flash. To turn off the hazard lights, turn the main switch to the “ON” position and operate the hazard switch again.

ECA10062

NOTICE

Do not use the hazard lights for an extended length of time with the engine not running, otherwise the battery may discharge.

EAU98024

Wheel switch “MENU/”

This switch operates the information display and menu system.

Operate this switch as follows:

Rotate - rotate the wheel upward/downward.

Short press - briefly press the wheel inward.

Long press - press the wheel inward for one second.

TIP

- See page 4-6 for more information on the main display screen and its functions.
- See page 4-12 for more information on the menu system and how to make setting changes.

Indicator lights and warning lights

EAU4939Y



1. Immobilizer system indicator light “”
2. Hazard indicator light “”
3. General malfunction indicator light “”
4. ABS warning light “”

Hazard indicator light “”

EAU4591

This indicator light flashes when the hazard switch is set to the “” position.

General malfunction indicator light

EAU4581

“”/“”

This light comes on in amber when the malfunction indicator (MIL) “” comes on.

This light comes on in red when either the coolant temperature warning indicator “” or the oil pressure warning indicator “” come on.

If the light does not come on initially when the vehicle power is turned on, or if the light remains on, have a Yamaha dealer check the vehicle.

ABS warning light “”

EAU91850

This warning light comes on when the vehicle is first turned on, and goes off after starting riding. If the warning light comes on while riding, the anti-lock brake system may not work correctly.

EWA16043

WARNING

If the ABS warning light does not turn off after reaching 10 km/h (6 mi/h), or if the warning light comes on while riding:

- Use extra caution to avoid possible wheel lock during emergency braking.
- Have a Yamaha dealer check the vehicle as soon as possible.

Immobilizer system indicator light

EAU0280

“”

When the main switch is turned off and 30 seconds have passed, the indicator light will flash steadily to indicate the immobilizer system is enabled. After 24 hours have passed, the indicator light will stop flashing, however the immobilizer system is still enabled.

TIP

When the vehicle is turned on, this light should come on for a few seconds and then go off. If the light does not come on, or if the light remains on, have a Yamaha dealer check the vehicle.

Transponder interference

If the immobilizer system indicator light flashes in the pattern, slowly 5 times then quickly 2 times, this could be

Instrument and control functions

caused by transponder interference. If this occurs, try the following.

1. Make sure there are no other immobilizer keys close to the main switch.
2. Use the code re-registering key to start the engine.
3. If the engine starts, turn it off, and try starting the engine with the standard keys.
4. If one or both of the standard keys do not start the engine, take the vehicle and all 3 keys to a Yamaha dealer to have the standard keys re-registered.

Main display screen

The main screen of the display has two different visual themes; Street and Touring. All functions are available in both themes. The theme can be selected in the menu system. (See page 4-13.)

EAU9982A


EWA18210



WARNING

Stop the vehicle before making any setting changes. Changing settings while riding can distract the operator and increase the risk of an accident.


Street theme

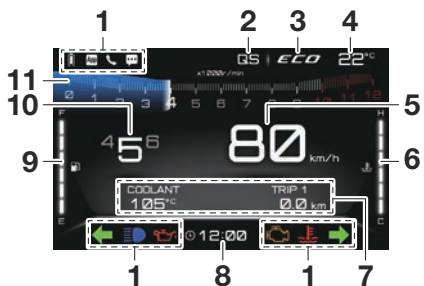

1. Indicator icons
2. Quick shifter indicator "QS" (if equipped)
3. Eco indicator "ECO"

4. Air temperature display
5. Speedometer
6. Coolant temperature meter
7. Information display
8. Clock
9. Fuel meter
10. Transmission gear display
11. Tachometer

Touring theme

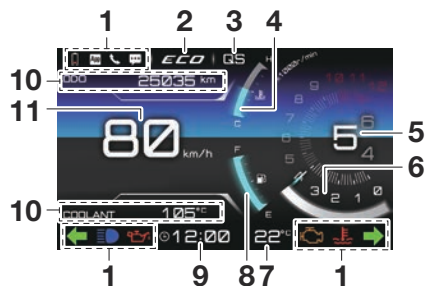

1. Indicator icons
2. Eco indicator "ECO"
3. Quick shifter indicator "QS" (if equipped)
4. Coolant temperature meter
5. Transmission gear display
6. Tachometer
7. Air temperature display
8. Fuel meter
9. Clock

Instrument and control functions

10. Information display

11. Speedometer

TIP

- This model uses a thin-film-transistor liquid-crystal display (TFT LCD) for good contrast and readability in various lighting conditions. However, due to the nature of this technology, it is normal for a small number of pixels to be inactive.
- The display units can be switched between kilometers/miles and Celsius/Fahrenheit. (See page 4-14.)

Menu pop-out

The first layer of the menu system is a pop-out that appears on the right side of the main display. While the pop-out menu is displayed, various other display items are relocated/hidden as shown:

Street theme



1. Pop-out menu

Touring theme



1. Transmission gear display (Relocated)

Speedometer

The speedometer shows the vehicle's traveling speed.

Tachometer

The tachometer shows the engine speed, as measured by the rotational velocity of the crankshaft, in revolutions per minute (r/min).

ECA10032

NOTICE

Do not operate the engine in the tachometer red zone.

Red zone: 10000 r/min and above

4

Fuel meter

The fuel meter indicates the amount of fuel in the fuel tank. The display segments of the meter disappear from "F" (full) towards "E" (empty) as the fuel level decreases.

When the last segment starts flashing, refuel as soon as possible.

ECAE0121

NOTICE

Do not let the vehicle run completely out of fuel. This may cause damage to the catalytic converter.

Instrument and control functions

TIP

If all the fuel meter display segments flash repeatedly, have a Yamaha dealer inspect the vehicle.

Coolant temperature meter

The coolant temperature meter indicates the radiator coolant temperature. When the coolant is too hot, the top segment will flash.

TIP

If all the coolant temperature meter display segments flash repeatedly, have a Yamaha dealer inspect the vehicle.


Clock “”

The clock uses a 12-hour time system.

TIP

The clock can be adjusted in the menu system. (See page 4-15.)

Transmission gear display

This shows which gear the transmission is in. This model has 6 gears and a neutral position. The neutral position is indicated by “”.

TIP

If a malfunction occurs, “-” will be shown.

“ECO” indicator icon

This icon is shown when the vehicle is being operated in an environmentally friendly, fuel-efficient manner. The icon is not shown when idling.

TIP

Consider the following tips to reduce fuel consumption:

- Avoid high engine speeds during acceleration.
- Travel at a constant speed.
- Select the transmission gear that is appropriate for the vehicle speed.

Air temperature display

The air temperature is displayed from -9°C (16°F) to 50°C (122°F) in 1°C (1°F) increments. The temperature displayed may vary from the actual ambient temperature.

TIP

“---” will be displayed if the detected temperature is higher or lower than the display range.

Coolant temperature warning icon

“”

This icon is shown when the coolant temperature is too high. Stop the vehicle and turn off the engine. Allow the engine to cool.

ECA10022

NOTICE

Do not continue to operate the engine if it is overheating.

Oil pressure warning icon “”

This icon is shown when the engine oil pressure is low. When the vehicle power is first turned on, engine oil pressure has yet to build up, therefore this icon will show until the engine has been started.

Instrument and control functions

TIP

If a malfunction is detected, the oil pressure warning icon will flash repeatedly. If this occurs, have a Yamaha dealer inspect the vehicle.

ECA26410

NOTICE

Do not continue to operate the engine if the oil pressure is low.

Malfunction indicator (MIL) icon



This icon comes on or flashes if a problem is detected in the engine or other vehicle control system. If this occurs, have a Yamaha dealer inspect the vehicle.

TIP

When the vehicle is turned on, this icon should come on briefly and then go off. If it does not come on, or if it remains on, have a Yamaha dealer inspect the vehicle.

NOTICE

If the MIL starts flashing, reduce engine speed to prevent exhaust system damage.

TIP

The engine is sensitively monitored by the on-board diagnostic system to detect deterioration or malfunction of the emission control system. Therefore, the malfunction indicator (MIL) icon may come on or flash due to vehicle modifications, lack of maintenance, or excessive/improper use of the vehicle. To prevent this, observe these precautions:

- Do not attempt to modify the software of the engine control unit.
- Do not add any electrical accessories that interfere with engine control.
- Do not use aftermarket accessories or parts such as suspension, spark plugs, injectors, exhaust system, etc.
- Do not change the drivetrain specifications (chain, sprockets, wheels, tires, etc.).

ECA26820

- Do not remove or alter the O2 sensor, air induction system, or exhaust parts (catalysts or EXUP, etc.).
- Maintain the drive chain properly.
- Maintain correct tire pressure.
- Maintain proper brake pedal height to prevent rear brake from dragging.
- Do not operate the vehicle in an extreme manner. For example, repeated or excessive opening and closing of the throttle, racing, burnouts, wheelies, extended half-clutch use, etc.

High beam indicator icon “”

This icon is shown when the high beam of the headlight is on.


Turn signal indicator icons

“”/“”

Each icon flashes when its corresponding turn signal lights are flashing.

Instrument and control functions

Smartphone battery level indicator icon “ This icon displays the connected smartphone’s current battery level.

- Icon off: No smartphone connected.
- “

When the battery level is below 11%, the icon will turn red and flash continuously.

Smartphone connectivity indicator icon “ This icon comes on when a smartphone is successfully connected to the CCU.

Incoming call/message indicator icons

The incoming call indicator icon appears when the connected smartphone receives a call. It will remain on for 30 seconds.



1. Street theme
2. Touring theme

The incoming message indicator icon appears when the connected smartphone receives an SMS, E-mail or other notification. It will remain on for 10 seconds.



1. Street theme
2. Touring theme

When either the incoming call indicator or the incoming message indicator icons appear while using the Street theme, the transmission gear display will be relocated as shown:



1. Transmission gear display (Relocated)

TIP

- Only one indicator icon can be active in this location on the display at a time. The incoming call indicator icon has priority
- Notifications must be setup for each application on the connected smartphone in advance.

Missed call indicator icon “ The missed call indicator icon comes on when the connected smartphone

misses a call. It will remain on until the vehicle power is turned off or until “Cancel Notification” is selected in the “Telephone” section of the menu system. (See page 4-13.)

Unread message indicator icon “”

The unread message indicator icon comes on when the connected smartphone receives a message. It will remain on until the vehicle power is turned off or until “Cancel Notification” is selected in the “Message” section of the menu system. (See page 4-14.)

Quick shifter icon (if equipped)


This icon comes on when the quick shifter is active and able to shift. When the icon is not visible, the quick shifter will not operate.

Information display


The vehicle information display can be set to show the following items:


- “ODO”: odometer
- “COOLANT”: coolant temperature
- “TRIP 1”: tripmeter 1
- “TRIP 2”: tripmeter 2


- “TRIP F”: fuel reserve tripmeter
- “INST FUEL”: current fuel consumption
- “AVG FUEL”: average fuel consumption


Rotate the wheel switch “” to cycle the items.


Operate the vehicle information display as follows:

Rotate the wheel switch “” to cycle which items are visible.


Short press the wheel switch “” inward and the topmost (Touring theme) or leftmost (Street theme) item which is currently visible will be highlighted blue.

If that item is non-resettable, the other visible item will be highlighted blue. If neither visible item is resettable, short pressing the wheel switch “” inward has no effect.

Long press the wheel switch “” inward and the blue-highlighted item will reset.

Short press the wheel switch “” inward to deselect a blue-highlighted item.

TIP

- The “TRIP 1”, “TRIP 2”, “TRIP F”, and “AVG FUEL” items can be individually reset.
- The blue highlight will disappear after a few seconds without input from the wheel switch “”.

Odometer “ODO”:

The odometer shows the total distance traveled by the vehicle.

TIP

The odometer will lock at 999999 km (621370 mile) and cannot be reset.

Coolant temperature “COOLANT”:

The coolant temperature is displayed from 40 °C (104 °F) to 116 °C (242 °F) in 1 °C (1 °F) increments.

TIP

- If the vehicle coolant temperature is below 40 °C (104 °F) the coolant temperature display will read “Low Temp”.

Instrument and control functions

EAUM4795

- If the vehicle coolant temperature is above 116 °C (242 °F) the coolant temperature display will read “High Temp”.

Tripmeters “TRIP 1” / “TRIP 2”:

“TRIP 1” and “TRIP 2” show the distance traveled since they were last reset.

TIP

“TRIP 1” and “TRIP 2” will reset to 0.0 and begin counting again after 9999.9 has been reached.

Fuel reserve tripmeter “TRIP F”:

When the fuel tank reserve level has been reached, “TRIP F” appears automatically and begins recording distance traveled from that point.

After refueling and traveling some distance, “TRIP F” will disappear.

Current fuel consumption “INST FUEL”:

The current fuel consumption display can be set to “km/L”, “L/100km” or “MPG” in the menu system. (See page 4-14.)

TIP

If traveling at speeds under 10 km/h, “--.” will be displayed.

Average fuel consumption “AVG FUEL”:

The average fuel consumption display can be set to “km/L”, “L/100km” or “MPG” in the menu system. (See page 4-14.)

TIP

After resetting the average fuel consumption display, “--.” will be shown until the vehicle has traveled 1 km.

Menu system

The first layer of the menu system is a pop-out that appears on the right side of the main display. (See page 4-7.) All other menu screens replace the main display screen with a full-screen view. While the menu system is full-screen, the main display items are relocated/hidden as shown:



TIP

- The menu system cannot be accessed while the vehicle is in motion or if certain warning lights/indicator icons are on. If this occurs while the menu system is already open, then the display will return to the main screen.

Instrument and control functions

- If the wheel switch “MENU” is not operated for 10 seconds the menu system will close and the display will return to the main screen.





Menu system general operation:

The menu system for this vehicle is controlled with the wheel switch “MENU” on the right handlebar:

- While the main screen is displayed, long press the wheel switch “MENU” to open the menu system top layer.
- Rotate the wheel switch “MENU” to cycle/highlight different items or adjust selected item values.
- Short press the wheel switch “MENU” to open a highlighted module or select/de-select a blue-highlighted item. When an item is selected it will turn grey.
- If a menu item is selected, long press of the wheel switch “MENU” will confirm the setting and return the menu to the previous module.
- If no menu item is selected, long press the wheel switch “MENU” to

exit the menu system and return to the main screen.

The menu system is divided into the following main modules:

| | |
|--|---|
|  “Setting” | Adjust settings related to the multi-function meter’s operation. (See page 4-14.) |
|  “Themes” | Change between display themes. (See page 4-13.) |
|  “Telephone” | Incoming/missed call settings. (See page 4-13.) |
|  “Message” | Incoming/missed notification settings. (See page 4-14.) |


“Themes”



This module allows you to switch between display themes. Select a theme

and the display will return to the main screen in that theme.


“Telephone”

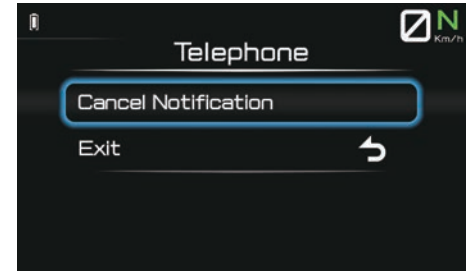

This module allows you to clear all stored call notifications. When “Cancel Notification” is selected, the incoming/missed call icon will disappear from the main screen.

Instrument and control functions

“Message”

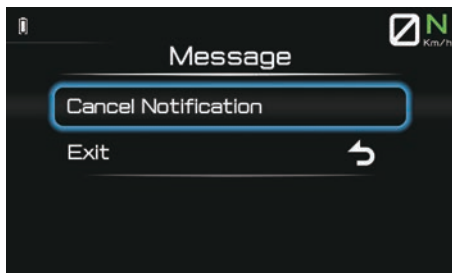

This module allows you to clear all stored message notifications. When “Cancel Notification” is selected, the message icon will disappear from the main screen.


“Setting”



The setting menu is further divided into the following modules:

| | |
|---------------|---|
| “Maintenance” | Set maintenance trip-meters. (See page 4-14.) |
| “Unit” | Change measurement units. (See page 4-14.) |
| “Brightness” | Adjust display brightness. (See page 4-15.) |
| “Clock” | Set clock. (See page 4-15.) |
| “All Reset” | Reset system settings. (See page 4-15.) |

“Maintenance”

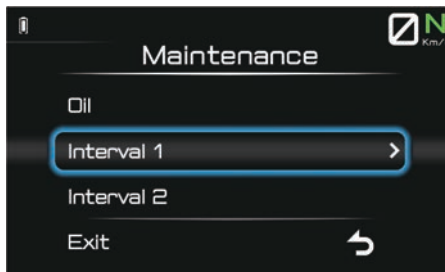


This module allows you to record distance traveled between engine oil changes “Oil”, and two other maintenance intervals of your choice “Interval 1”/ “Interval 2”. Short press the wheel switch “MENU” inward to enter the items sub-module, where the current mileage

for the item can be viewed and the item can be reset.



After maintenance to one of the items has been completed, short press the wheel switch “MENU” to select it and then long press the wheel switch “MENU” to reset it.

“Unit”

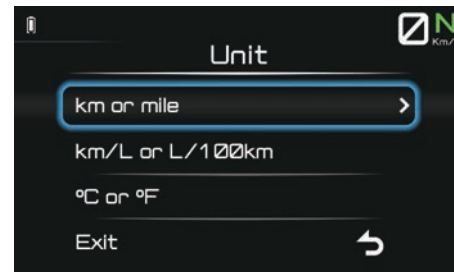


Instrument and control functions

This module allows you to change the measurement units. Each of the three items contain a sub-menu where the desired unit is selected.

TIP

If “mile” is selected as a speed unit, “MPG” will be automatically set as the fuel economy unit and the menu item will be grayed out.

“Brightness”

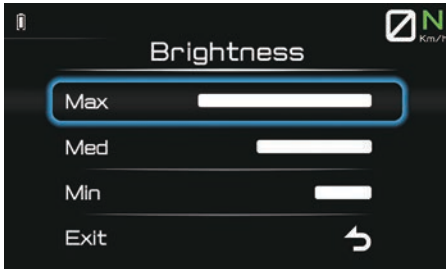

This module allows you to adjust the screen brightness between 3 different levels.

TIP

The TFT display is equipped with an ambient light sensor which is used to adjust the screen brightness automati-

cally. Using this module to manually set the brightness cancels automatic mode. Turning the main switch “OFF”/“ON” will reset screen brightness to automatic mode.

“Clock”



This module allows you to set the 12-hour clock. The hours and minutes are set individually.

“All Reset”




This module allows you to reset all of the following at once: tripmeters (not including maintenance tripmeters), and all measurement units.

Instrument and control functions

4

Clutch lever

EAU12823

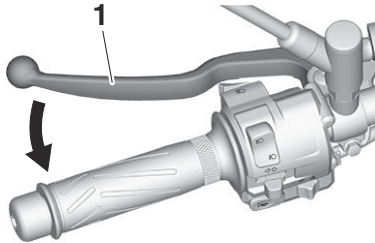

1. Clutch lever


To disengage the drivetrain from the engine, such as when shifting gears, pull the clutch lever toward to the handlebar. Release the lever to engage the clutch and transmit power to the rear wheel.

TIP

The lever should be pulled rapidly and released slowly for smooth shifting. (See page 6-3.)

Shift pedal

EAU12876

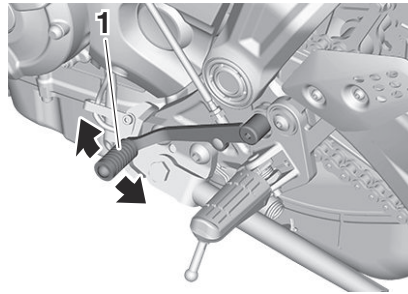


1. Shift pedal

The shift pedal is located on the left side of the motorcycle. To shift the transmission to a higher gear, move the shift pedal up. To shift the transmission to a lower gear, move the shift pedal down. (See page 6-3.)

Brake lever

EAU26827

The brake lever is located on the right side of the handlebar. To apply the front brake, pull the lever toward the throttle grip.

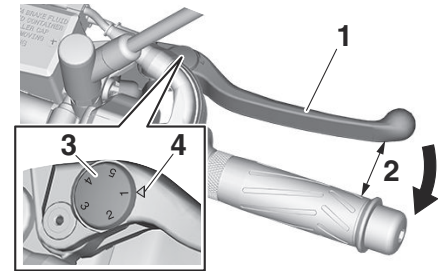


1. Brake lever
2. Distance
3. Brake lever position adjusting dial
4. Match mark

The brake lever is equipped with a brake lever position adjusting dial. To adjust the distance between the brake lever and the throttle grip, push the brake lever away from the throttle grip and rotate the adjusting dial. Make sure the setting number on the adjusting dial aligns with the match mark on the brake lever.

Brake pedal

EAU12944

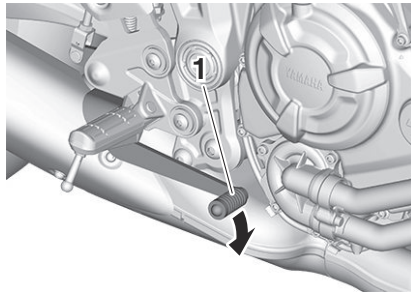

1. Brake pedal

The brake pedal is located on the right side of the motorcycle. To apply the rear brake, press down on the brake pedal.

ABS

The Yamaha ABS (Anti-lock Brake System) features a dual electronic control system, which acts on the front and rear brakes independently.

Operate the brakes with ABS as you would conventional brakes. If the ABS is activated, a pulsating sensation may be felt at the brake lever or brake pedal. In this situation, continue to apply the brakes and let the ABS work; do not “pump” the brakes as this will reduce braking effectiveness.

EAU63041

WARNING

Always keep a sufficient distance from the vehicle ahead to match the riding speed even with ABS.

- **The ABS performs best with long braking distances.**
- **On certain surfaces, such as rough or gravel roads, the braking distance may be longer with the ABS than without.**

EWA16051

The ABS is monitored by an ECU, which will revert the system to conventional braking if a malfunction occurs.

TIP

- The ABS performs a self-diagnostic test each time the vehicle first starts off after the key is turned to “ON” and the vehicle has traveled at a speed of 10 km/h (6 mi/h) or higher. During this test, a “clicking” noise can be heard from the hydraulic control unit, and if the brake lever or brake pedal is even slightly applied, a vibration can be felt at the lever and pedal, but these do not indicate a malfunction.
- This ABS has a test mode which allows the owner to experience the pulsation at the brake lever or brake pedal when the ABS is operating. However, special tools are required, so please consult your Yamaha dealer.

ECA20100

NOTICE


Be careful not to damage the wheel sensor or wheel sensor rotor; otherwise, improper performance of the ABS will result.

Instrument and control functions

4




1. Front wheel sensor
2. Front wheel sensor rotor

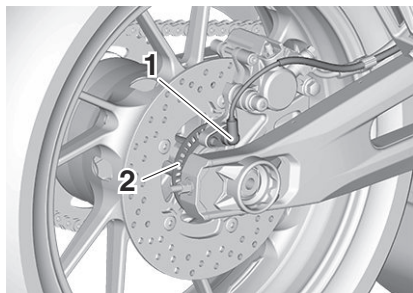

1. Rear wheel sensor
2. Rear wheel sensor rotor

Fuel tank cap

EAU13077

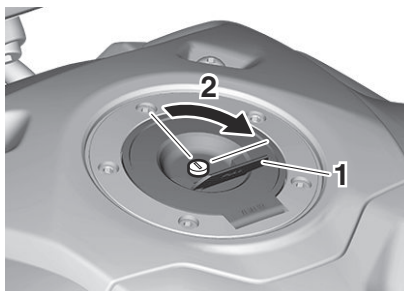

1. Fuel tank cap lock cover
2. Unlock.

To open the fuel tank cap

Open the fuel tank cap lock cover, insert the key, and then turn it 1/4 turn clockwise. The lock will be released and the fuel tank cap can be opened.

To close the fuel tank cap

With the key still inserted, push down the fuel tank cap. Turn the key 1/4 turn counterclockwise, remove it, and then close the lock cover.

TIP

The fuel tank cap cannot be closed unless the key is in the lock. In addition,

the key cannot be removed if the cap is not properly closed and locked.

EWA11092

WARNING

Make sure that the fuel tank cap is properly closed after filling fuel. Leaking fuel is a fire hazard.

Fuel

Make sure there is sufficient gasoline in the tank.

EAU13222


EWA10882



WARNING

Gasoline and gasoline vapors are extremely flammable. To avoid fires and explosions and to reduce the risk of injury when refueling, follow these instructions.

1. Before refueling, turn off the engine and be sure that no one is sitting on the vehicle. Never refuel while smoking, or while in the vicinity of sparks, open flames, or other sources of ignition such as the pilot lights of water heaters and clothes dryers.
2. Do not overfill the fuel tank. When refueling, be sure to insert the pump nozzle into the fuel tank filler hole. Stop filling when the fuel reaches the bottom of the filler tube. Because fuel expands when it heats up, heat from the engine or the sun can cause fuel to spill out of the fuel tank.

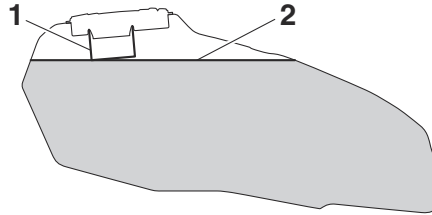

1. Fuel tank filler tube
2. Maximum fuel level
3. Wipe up any spilled fuel immediately. **NOTICE: Immediately wipe off spilled fuel with a clean, dry, soft cloth, since fuel may deteriorate painted surfaces or plastic parts.**^[ECA10072]
4. Be sure to securely close the fuel tank cap.

EWA15152



WARNING

Gasoline is poisonous and can cause injury or death. Handle gasoline with care. Never siphon gasoline by mouth. If you should swallow some gasoline or inhale a lot of gasoline vapor, or get some gasoline in

your eyes, see your doctor immediately. If gasoline spills on your skin, wash with soap and water. If gasoline spills on your clothing, change your clothes.

EAU86072

4

Your Yamaha engine was designed to use unleaded gasoline with a research octane number of 90 or higher. If engine knocking or pinging occurs, use a gasoline of a different brand or higher octane rating.

Recommended fuel:

Unleaded gasoline (E10 acceptable)

Octane number (RON):

90

Fuel tank capacity:

14 L (3.7 US gal, 3.1 Imp.gal)

Fuel tank reserve:

2.7 L (0.71 US gal, 0.59 Imp.gal)



TIP

- This mark identifies the recommended fuel for this vehicle as specified by European regulation (EN228).
- Confirm the gasoline pump nozzle has the same fuel identification mark.

Gasohol

There are two types of gasohol: gasohol containing ethanol and that containing methanol. Gasohol containing ethanol can be used if the ethanol content does not exceed 10% (E10). Gasohol containing methanol is not recommended by Yamaha because it can cause damage to the fuel system or vehicle performance problems.


ECA11401

NOTICE

Use only unleaded gasoline. The use of leaded gasoline will cause severe damage to internal engine parts, such as the valves and piston rings, as well as to the exhaust system.

EAU86160

Fuel tank overflow hose

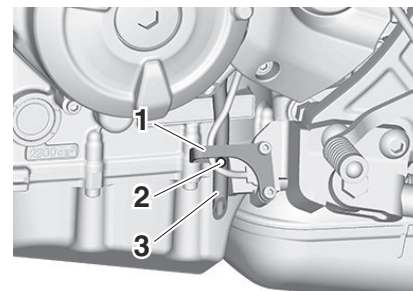

1. Clamp
2. Original position (paint mark)
3. Fuel tank overflow hose

The overflow hose drains excess gasoline and directs it safely away from the vehicle.

Before operating the vehicle:

- Check the fuel tank overflow hose connection.
- Check the fuel tank overflow hose for cracks or damage, and replace it if necessary.
- Make sure that the fuel tank overflow hose is not blocked, and clean it if necessary.
- Make sure that the fuel tank overflow hose is positioned as shown.

TIP

See page 7-9 for canister information.

Catalytic converter

EAU13435

The exhaust system contains catalytic converter(s) to reduce harmful exhaust emissions.

EWA10863

WARNING

The exhaust system is hot after operation. To prevent a fire hazard or burns:

- Do not park the vehicle near possible fire hazards such as grass or other materials that easily burn.
- Park the vehicle in a place where pedestrians or children are not likely to touch the hot exhaust system.
- Make sure that the exhaust system has cooled down before doing any maintenance work.
- Do not allow the engine to idle more than a few minutes. Long idling can cause a build-up of heat.


Seats

EAU83851

Passenger seat

To remove the passenger seat

1. Insert the key into the seat lock, and then turn it counterclockwise.

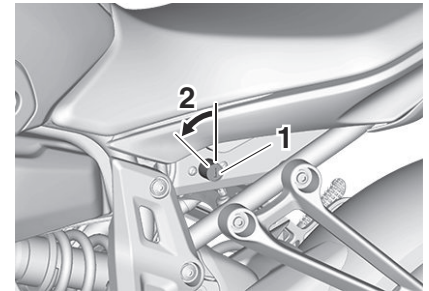

1. Seat lock
2. Unlock.


2. While holding the key in that position, lift the rear of the passenger seat and pull it backward.

To install the passenger seat

1. Insert the projections on the front of the passenger seat into the seat holders as shown, and then push

Instrument and control functions

the rear of the seat down to lock it in place.

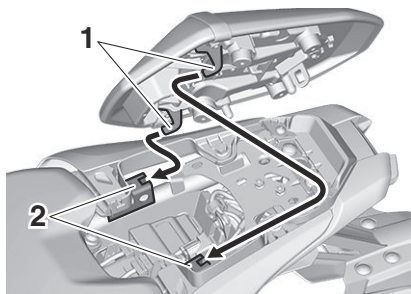


1. Projection
2. Seat holder

2. Remove the key.


Rider seat

To remove the rider seat

1. Remove the passenger seat, and then remove the hexagon wrench located on the bottom of the seat.

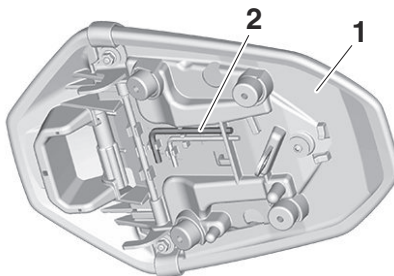


1. Passenger seat
2. Remove the bolts with the hexagon wrench.

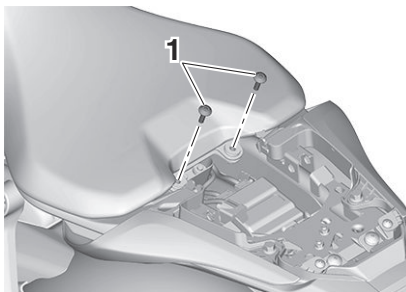

1. Bolt
3. Lift the seat rearward and up to remove it.

To install the rider seat

1. Fit the slot in the seat onto the projection on the frame cross member as shown, and then place the seat in the original position.

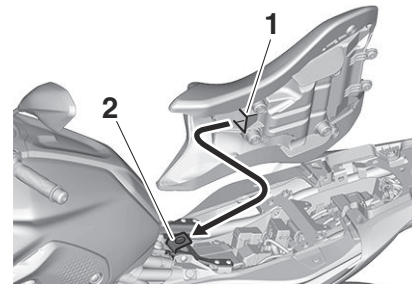

1. Slot
2. Projection
2. Install the bolts with the hexagon wrench.
3. Insert the hexagon wrench back into its holder on the passenger seat.
4. Install the passenger seat.


TIP

Make sure that the seats are properly secured before riding.

Helmet holding cable

EAU59981

A helmet holding cable is located on the bottom of the passenger seat. Use this cable in conjunction with the screwdriver to secure a helmet to the vehicle.

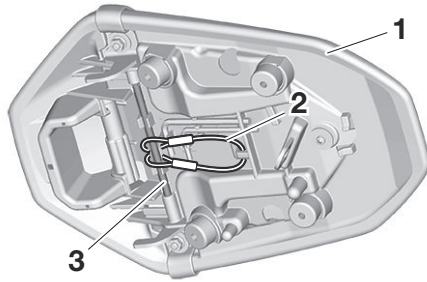


1. Passenger seat
2. Helmet holding cable
3. Screwdriver

To secure a helmet with the helmet holding cable

1. Remove the passenger seat. (See page 4-21.)
2. Remove the screwdriver from its holders on the passenger seat, and then remove the helmet holding cable from the screwdriver.

TIP

When removing the screwdriver, slide the screwdriver toward the “+” mark on the passenger seat.

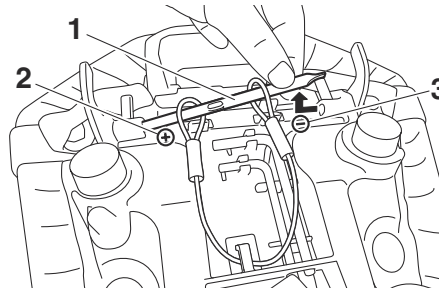


1. Screwdriver
2. “+” mark
3. “-” mark

3. Pass the helmet holding cable through the buckle on the helmet strap.
4. Hook the cable loops over the screwdriver, install the screwdriver by first inserting the screwdriver into the holder with the “+” mark, and then slide the screwdriver toward the holder with the “-” mark.

TIP

Make sure that the screwdriver is securely positioned between its holders, and then position the cable loops toward the middle of the screwdriver before installing the passenger seat.

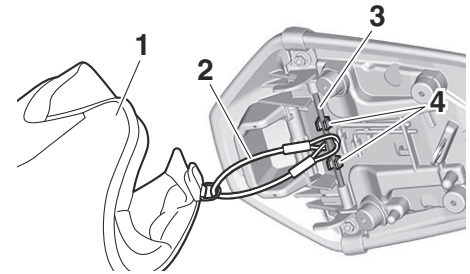


1. Helmet
 2. Helmet holding cable
 3. Screwdriver
 4. Holder
 5. Install the passenger seat.
- WARNING! Never ride with a helmet attached to the helmet holder, since the helmet may hit objects, causing loss of control and possibly an accident.**[EWA10162]

Instrument and control functions

To release a helmet from the helmet holding cable

1. Remove the passenger seat.
2. Remove the screwdriver, then remove the helmet holding cable from the helmet.
3. Store the cable under the seat by hooking the cable loops over the screwdriver, install the screwdriver in its original position, and then hook the helmet holding cable over the hook on the bottom of the passenger seat.

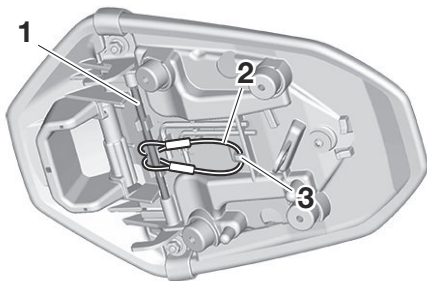

1. Screwdriver
2. Helmet holding cable
3. Hook

4. Install the passenger seat.

Adjusting the shock absorber assembly

EAU91870

This shock absorber assembly is equipped with a spring preload adjusting ring and a rebound damping force adjusting screw.

ECA10102

NOTICE


To avoid damaging the mechanism, do not attempt to turn beyond the maximum or minimum settings.

Spring preload

Turn the adjusting ring in direction (a) to increase the spring preload.

Turn the adjusting ring in direction (b) to decrease the spring preload.

Align the appropriate notch in the adjusting ring with the position indicator on the shock absorber.

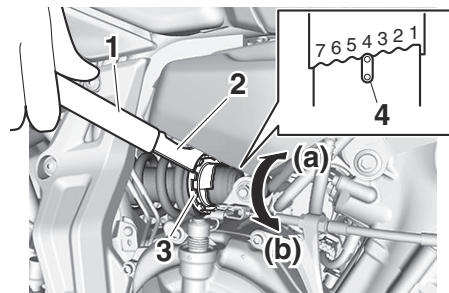

1. Extension bar
2. Special wrench
3. Spring preload adjusting ring
4. Position indicator

TIP

Use the special wrench and extension bar in the additional tool kit to make this adjustment.

Spring preload setting:

Minimum (soft):

1

Standard:

4

Maximum (hard):


7

Rebound damping force

Turn the adjusting screw in direction (a) to increase the rebound damping force.

Turn the adjusting screw in direction (b) to decrease the rebound damping force.

To set the rebound damping force, turn the adjuster in direction (a) until it stops, and then count the turns in direction (b).

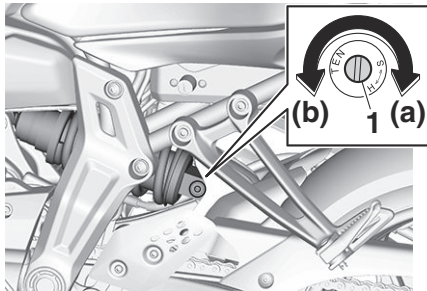

1. Rebound damping force adjusting screw

Rebound damping setting:

Minimum (soft):

2.5 turn(s) in direction (b)

Standard:

1.5 turn(s) in direction (b)

Maximum (hard):

0 turn(s) in direction (b)

TIP

When turning the damping force adjuster in direction (b), it may turn beyond the stated specifications, however such adjustments are ineffective and may damage the suspension.

EWA10222

⚠ WARNING

This shock absorber assembly contains highly pressurized nitrogen gas. Read and understand the following information before handling the shock absorber assembly.

- Do not tamper with or attempt to open the cylinder assembly.
- Do not subject the shock absorber assembly to an open flame or other high heat source. This may cause the unit to explode due to excessive gas pressure.
- Do not deform or damage the cylinder in any way. Cylinder damage will result in poor damping performance.
- Do not dispose of a damaged or worn-out shock absorber assembly yourself. Take the shock


absorber assembly to a Yamaha dealer for any service.

Instrument and control functions


Luggage strap holders

EAU85221

senger seat (page 4-21), remove the straps from their hooks, and then install the seat with the straps hanging out.

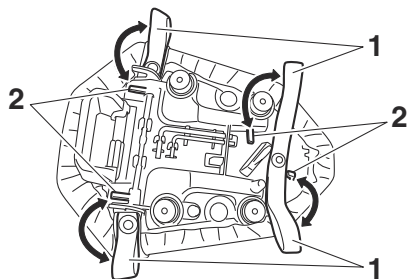

1. Luggage strap holder
2. Hook

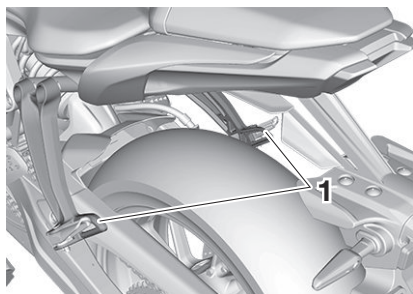

1. Luggage strap holder

Use the indicated strap points to secure luggage to the vehicle.

To use the luggage strap holders under the passenger seat, remove the pas-

DC connectors

EAU70642

This vehicle is equipped with additional wiring and DC connector(s) for the installation of optional electric accessories.

Consult a Yamaha dealer for more information regarding the location and capacity of the DC connector(s) and about what accessories are capable of being installed.

Sidestand

EAU15306

The sidestand is located on the left side of the frame. Raise the sidestand or lower it with your foot while holding the vehicle upright.

TIP

The built-in sidestand switch is part of the ignition circuit cut-off system, which cuts the ignition in certain situations. (See the following section for an explanation of the ignition circuit cut-off system.)

EWA10242



The vehicle must not be ridden with the sidestand down, or if the sidestand cannot be properly moved up (or does not stay up), otherwise the sidestand could contact the ground and distract the operator, resulting in a possible loss of control. Yamaha's ignition circuit cut-off system has been designed to assist the operator in fulfilling the responsibility of raising the sidestand before starting off. Therefore, check this system regularly and have a Yamaha

dealer repair it if it does not function properly.

EAUA1270

Ignition circuit cut-off system

This system prevents in-gear engine starts unless the clutch lever is pulled and the sidestand is up. Also, it will stop the running engine should the sidestand be lowered while the transmission is in gear.

Periodically check this system via the following procedure.


TIP

- This check is most reliable if performed with a warmed-up engine.
- See pages 4-2 and 4-3 for switch operation information.

Instrument and control functions

EAU1280

4

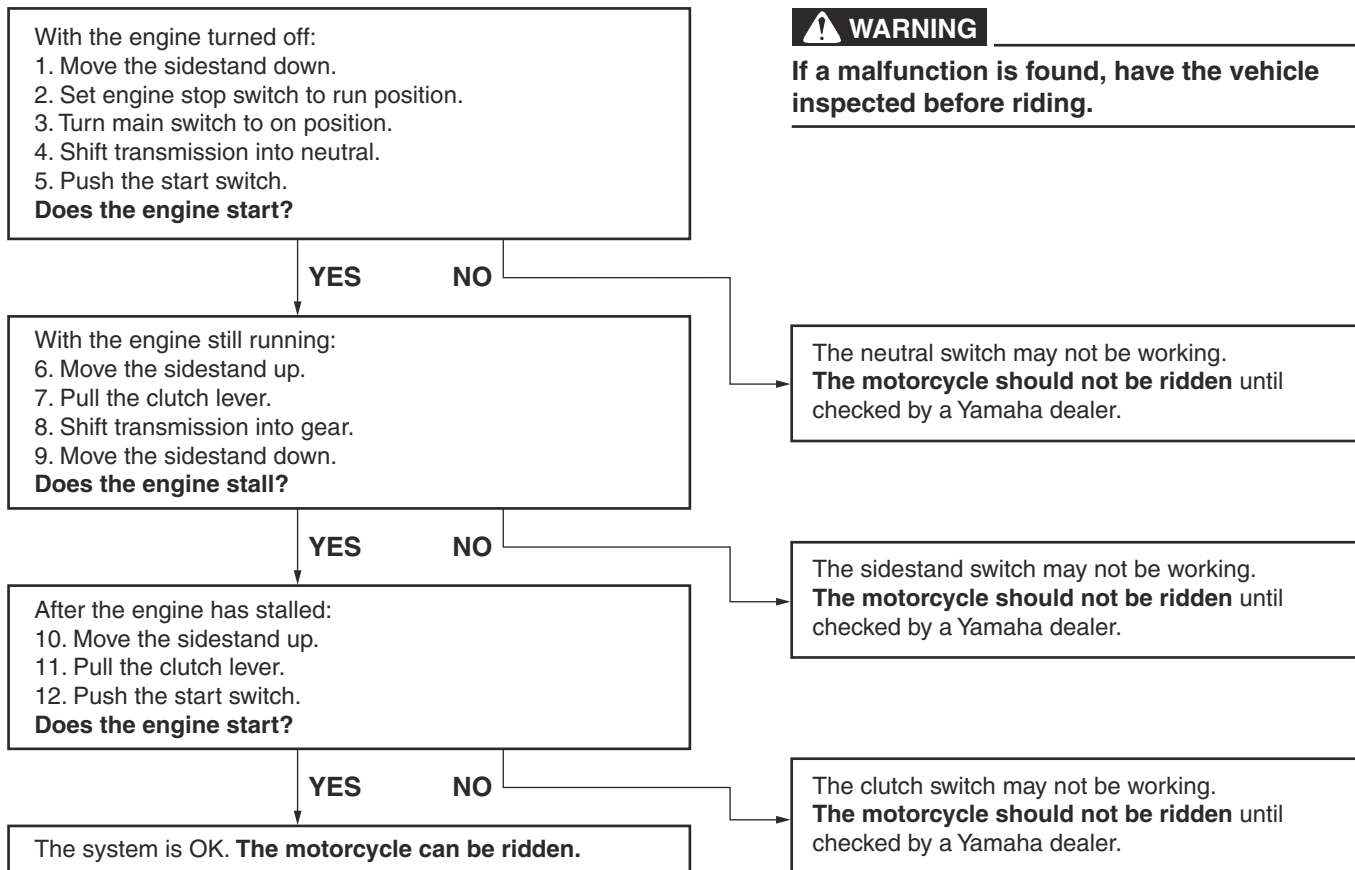

For your safety – pre-operation checks

EAU1559B

Inspect your vehicle each time you use it to make sure the vehicle is in safe operating condition. Always follow the inspection and maintenance procedures and schedules described in the Owner's Manual.

EWA11152



Failure to inspect or maintain the vehicle properly increases the possibility of an accident or equipment damage. Do not operate the vehicle if you find any problem. If a problem cannot be corrected by the procedures provided in this manual, have the vehicle inspected by a Yamaha dealer.

Before using this vehicle, check the following points:

| ITEM | CHECKS | PAGE |
|-------------|---|------------|
| Fuel | <ul style="list-style-type: none">• Check fuel level in fuel tank.• Refuel if necessary.• Check fuel line for leakage.• Check fuel tank overflow hose for obstructions, cracks or damage, and check hose connection. | 4-19, 4-20 |
| Engine oil | <ul style="list-style-type: none">• Check oil level in engine.• If necessary, add recommended oil to specified level.• Check vehicle for oil leakage. | 7-9 |
| Coolant | <ul style="list-style-type: none">• Check coolant level in reservoir.• If necessary, add recommended coolant to specified level.• Check cooling system for leakage. | 7-10 |
| Front brake | <ul style="list-style-type: none">• Check operation.• If soft or spongy, have Yamaha dealer bleed hydraulic system.• Check brake pads for wear.• Replace if necessary.• Check fluid level in reservoir.• If necessary, add specified brake fluid to specified level.• Check hydraulic system for leakage. | 7-18, 7-18 |

For your safety – pre-operation checks

| ITEM | CHECKS | PAGE |
|--------------------------------|---|------------|
| Rear brake | <ul style="list-style-type: none"> • Check operation. • If soft or spongy, have Yamaha dealer bleed hydraulic system. • Check brake pads for wear. • Replace if necessary. • Check fluid level in reservoir. • If necessary, add specified brake fluid to specified level. • Check hydraulic system for leakage. | 7-18, 7-18 |
| Clutch | <ul style="list-style-type: none"> • Check operation. • Lubricate cable if necessary. • Check lever free play. • Adjust if necessary. | 7-16 |
| Throttle grip | <ul style="list-style-type: none"> • Make sure that operation is smooth. • Check throttle grip free play. • If necessary, have Yamaha dealer adjust throttle grip free play and lubricate cable and grip housing. | 7-13, 7-23 |
| Control cables | <ul style="list-style-type: none"> • Make sure that operation is smooth. • Lubricate if necessary. | 7-22 |
| Drive chain | <ul style="list-style-type: none"> • Check chain slack. • Adjust if necessary. • Check chain condition. • Lubricate if necessary. | 7-20, 7-22 |
| Wheels and tires | <ul style="list-style-type: none"> • Check for damage. • Check tire condition and tread depth. • Check air pressure. • Correct if necessary. | 7-13, 7-16 |
| Brake and shift pedals | <ul style="list-style-type: none"> • Make sure that operation is smooth. • Lubricate pedal pivoting points if necessary. | 7-23 |
| Brake and clutch levers | <ul style="list-style-type: none"> • Make sure that operation is smooth. • Lubricate lever pivoting points if necessary. | 7-24 |
| Sidestand | <ul style="list-style-type: none"> • Make sure that operation is smooth. • Lubricate pivot if necessary. | 7-24 |

For your safety – pre-operation checks

| ITEM | CHECKS | PAGE |
|--|---|------|
| Chassis fasteners | <ul style="list-style-type: none">• Make sure that all nuts, bolts and screws are properly tightened.• Tighten if necessary. | — |
| Instruments, lights, signals and switches | <ul style="list-style-type: none">• Check operation.• Correct if necessary. | — |
| Sidestand switch | <ul style="list-style-type: none">• Check operation of ignition circuit cut-off system.• If system is not working correctly, have Yamaha dealer check vehicle. | 4-27 |

Operation and important riding points

EAU15952

Read the Owner's Manual carefully to become familiar with all controls. If there is a control or function you do not understand, ask your Yamaha dealer.

EWA10272

WARNING

Failure to familiarize yourself with the controls can lead to loss of control, which could cause an accident or injury.

6

Engine break-in

There is never a more important period in the life of your engine than the period between 0 and 1600 km (1000 mi). For this reason, you should read the following material carefully.

Since the engine is brand new, do not put an excessive load on it for the first 1600 km (1000 mi). The various parts in the engine wear and polish themselves to the correct operating clearances. During this period, prolonged full-throttle operation or any condition that might result in engine overheating must be avoided.

EAU16842

1000–1600 km (600–1000 mi)

Avoid prolonged operation above 6000 r/min.

1600 km (1000 mi) and beyond

The vehicle can now be operated normally.

ECA10311

NOTICE

- **Keep the engine speed out of the tachometer red zone.**
 - **If any engine trouble should occur during the engine break-in period, immediately have a Yamaha dealer check the vehicle.**
-

EAU17094

0–1000 km (0–600 mi)

Avoid prolonged operation above 5000 r/min. **NOTICE: After 1000 km (600 mi) of operation, the engine oil must be changed and the oil filter cartridge or element replaced.**^[ECA10303]

EAU91880

ECA24110

EAU88781

Starting the engine

The ignition circuit cut-off system will enable starting when:

- the transmission is in the neutral position or
- the transmission is in gear, the sidestand is up, and the clutch lever is pulled.

To start the engine

1. Turn the main switch on and set the engine stop switch to the run position.
2. Confirm the indicator and warning light(s) come on for a few seconds, and then go off. (See page 4-5.)

TIP

- Do not start the engine if the malfunction indicator light remains on.
- The oil pressure warning light should come on and stay on until the engine is started.
- The ABS warning light should come on and stay on until the vehicle reaches a speed of 10 km/h (6 mi/h).

NOTICE

If a warning or indicator light does not work as described above, have a Yamaha dealer check the vehicle.

3. Shift the transmission into the neutral position.
4. Start the engine by pushing the start switch.
5. Release the start switch when the engine starts, or after 5 seconds. Wait 10 seconds before pressing the switch again to allow battery voltage to restore.

ECA11043

NOTICE

For maximum engine life, never accelerate hard when the engine is cold!

TIP


This model is equipped with:

- a lean angle sensor. This sensor stops the engine in case of a vehicle turnover. If this happens, the malfunction indicator light will come on, but this is not a malfunction. Turn the vehicle power off and then back on again to cancel the indicator light. Failing to do so will prevent the engine from starting even though the engine will crank when pushing the start switch.
- an engine auto-stop system. The engine stops automatically if left idling for 20 minutes. If the engine stops, simply push the start switch to restart the engine.

Operation and important riding points

Shifting

EAU16675

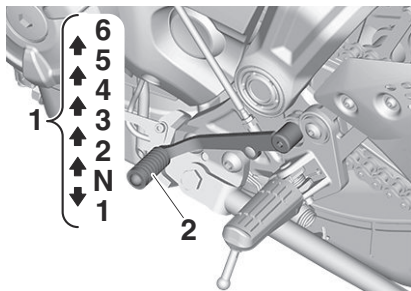

1. Gear positions
2. Shift pedal

Shifting gears lets you control the amount of engine power available for starting off, accelerating, climbing hills, etc.

The gear positions are shown in the illustration.

TIP

To shift the transmission into the neutral position (**N**), press the shift pedal down repeatedly until it reaches the end of its travel, and then slightly raise it.

NOTICE

ECA10262

- When shifting, press the shift pedal firmly until you feel the gear shift is complete.
- Even with the transmission in the neutral position, do not coast for long periods of time with the engine off, nor tow the motorcycle for long distances. The transmission is properly lubricated only when the engine is running. Inadequate lubrication may damage the transmission.
- Always use the clutch while changing gears to avoid damaging the engine, transmission, and drive train, which are not designed to withstand the shock of forced shifting.

To start out and accelerate

EAU85370

1. Pull the clutch lever to disengage the clutch.
2. Shift the transmission into first gear. The neutral indicator light should go out.

3. Open the throttle gradually, and at the same time, release the clutch lever slowly.
4. After starting out, close the throttle, and at the same time, quickly pull the clutch lever in.
5. Shift the transmission into second gear. (Make sure not to shift the transmission into the neutral position.)
6. Open the throttle part way and gradually release the clutch lever.
7. Follow the same procedure when shifting to the next higher gear.

EAU85380

To decelerate

1. Release the throttle and apply both the front and the rear brakes smoothly to slow the motorcycle.
2. As the vehicle decelerates, shift to a lower gear.
3. When the engine is about to stall or runs roughly, pull the clutch lever in, use the brakes to slow the motorcycle, and continue to down-shift as necessary.
4. Once the motorcycle has stopped, the transmission can be shifted

into the neutral position. The neutral indicator light should come on and then the clutch lever can be released.

EWA17380

WARNING

- **Improper braking can cause loss of control or traction. Always use both brakes and apply them smoothly.**
- **Make sure that the motorcycle and the engine have sufficiently slowed before shifting to a lower gear. Engaging a lower gear when the vehicle or engine speed is too high could make the rear wheel lose traction or the engine to over-rev. This could cause loss of control, an accident and injury. It could also cause engine or drive train damage.**

Tips for reducing fuel consumption

EAU16811

Fuel consumption depends largely on your riding style. Consider the following tips to reduce fuel consumption:

- Shift up swiftly, and avoid high engine speeds during acceleration.
- Do not rev the engine while shifting down, and avoid high engine speeds with no load on the engine.
- Turn the engine off instead of letting it idle for an extended length of time (e.g., in traffic jams, at traffic lights or at railroad crossings).

Parking

EAU17214

When parking, stop the engine, and then remove the key from the main switch.

EWA10312

WARNING

- **Since the engine and exhaust system can become very hot, park in a place where pedestrians or children are not likely to touch them and be burned.**
- **Do not park on a slope or on soft ground, otherwise the vehicle may overturn, increasing the risk of a fuel leak and fire.**
- **Do not park near grass or other flammable materials which might catch fire.**

Periodic maintenance and adjustment

EAU17246

Periodic inspection, adjustment, and lubrication will keep your vehicle in the safest and most efficient condition possible. Safety is an obligation of the vehicle owner/operator. The most important points of vehicle inspection, adjustment, and lubrication are explained on the following pages.

The intervals given in the periodic maintenance charts should be simply considered as a general guide under normal riding conditions. However, depending on the weather, terrain, geographical location, and individual use, the maintenance intervals may need to be shortened.

EWA10322

WARNING

Failure to properly maintain the vehicle or performing maintenance activities incorrectly may increase your risk of injury or death during service or while using the vehicle. If you are not familiar with vehicle service, have a Yamaha dealer perform service.

EWA15123

WARNING

Turn off the engine when performing maintenance unless otherwise specified.

- **A running engine has moving parts that can catch on body parts or clothing and electrical parts that can cause shocks or fires.**
- **Running the engine while servicing can lead to eye injury, burns, fire, or carbon monoxide poisoning – possibly leading to death. See page 1-2 for more information about carbon monoxide.**

EWA15461

WARNING

Brake discs, calipers, drums, and linings can become very hot during use. To avoid possible burns, let brake components cool before touching them.

EAU17303


Emission controls not only function to ensure cleaner air, but are also vital to proper engine operation and maximum performance. In the following periodic maintenance charts, the services related to emissions control are grouped separately. These services require specialized data, knowledge, and equipment. Maintenance, replacement, or repair of the emission control devices and systems may be performed by any repair establishment or individual that is certified (if applicable). Yamaha dealers are trained and equipped to perform these particular services.

Tool kits

EAU85240

TIP

If you do not have the tools or experience required for a particular job, have your Yamaha dealer perform it for you.

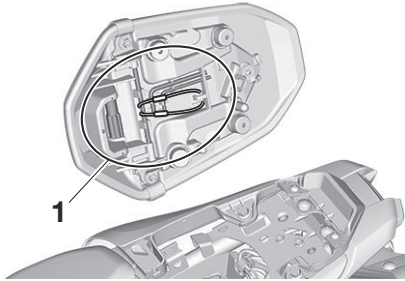

1. Tool kit

The on-board tool kit is in the location shown. Also, an additional tool kit was handed out separately at the time of vehicle purchase.

The information included in this manual and the tools provided in the tool kits are intended to assist you in the performance of preventive maintenance and minor repairs. However, a torque wrench and other tools are necessary to perform certain maintenance work correctly.

Periodic maintenance and adjustment

EAU71033

Periodic maintenance charts

TIP

- Items marked with an asterisk should be performed by your Yamaha dealer because these items require special tools, data, and technical skills.
- From 50000 km (30000 mi), repeat the maintenance intervals starting from 10000 km (6000 mi).
- **The annual checks must be performed every year, except if a distance-based maintenance is performed instead.**

Periodic maintenance chart for the emission control system

EAU71052

| NO. | ITEM | CHECK OR MAINTENANCE JOB | ODOMETER READING | | | | | ANNUAL CHECK |
|-----|---------------------------------------|--|---------------------------|--------------------|---------------------|---------------------|---------------------|--------------|
| | | | 1000 km (600 mi) | 10000 km (6000 mi) | 20000 km (12000 mi) | 30000 km (18000 mi) | 40000 km (24000 mi) | |
| 1 | * Fuel line | <ul style="list-style-type: none"> • Check fuel hoses for cracks or damage. • Replace if necessary. | | √ | √ | √ | √ | √ |
| 2 | * Spark plugs | <ul style="list-style-type: none"> • Check condition. • Adjust gap and clean. | | √ | | √ | | |
| | | <ul style="list-style-type: none"> • Replace. | | | √ | | √ | |
| 3 | * Valve clearance | <ul style="list-style-type: none"> • Check and adjust. | Every 40000 km (24000 mi) | | | | | |
| 4 | * Fuel injection | <ul style="list-style-type: none"> • Check engine idle speed. | √ | √ | √ | √ | √ | √ |
| | | <ul style="list-style-type: none"> • Check and adjust synchronization. | | √ | √ | √ | √ | √ |
| 5 | * Exhaust system | <ul style="list-style-type: none"> • Check for leakage. • Tighten if necessary. • Replace gaskets if necessary. | √ | √ | √ | √ | √ | |
| 6 | * Evaporative emission control system | <ul style="list-style-type: none"> • Check control system for damage. • Replace if necessary. | | | √ | | √ | |

Periodic maintenance and adjustment

EAU71354

General maintenance and lubrication chart

| NO. | ITEM | CHECK OR MAINTENANCE JOB | ODOMETER READING | | | | | ANNUAL CHECK |
|-----|----------------------------|--|---------------------------|-----------------------|------------------------|------------------------|------------------------|--------------|
| | | | 1000 km (600 mi) | 10000 km (6000 mi) | 20000 km (12000 mi) | 30000 km (18000 mi) | 40000 km (24000 mi) | |
| 1 | * Diagnostic system check | <ul style="list-style-type: none"> Perform dynamic inspection using Yamaha diagnostic tool. Check the error codes. | √ | √ | √ | √ | √ | √ |
| 2 | * Air filter element | <ul style="list-style-type: none"> Replace. | Every 40000 km (24000 mi) | | | | | |
| 3 | Air filter case check hose | <ul style="list-style-type: none"> Clean. | √ | √ | √ | √ | √ | |
| 4 | Clutch | <ul style="list-style-type: none"> Check operation. Adjust. | √ | √ | √ | √ | √ | |
| 5 | * Front brake | <ul style="list-style-type: none"> Check operation, fluid level, and for fluid leakage. Replace brake pads if necessary. | √ | √ | √ | √ | √ | √ |
| 6 | * Rear brake | <ul style="list-style-type: none"> Check operation, fluid level, and for fluid leakage. Replace brake pads if necessary. | √ | √ | √ | √ | √ | √ |
| 7 | * Brake hoses | <ul style="list-style-type: none"> Check for cracks or damage. | | √ | √ | √ | √ | √ |
| | | <ul style="list-style-type: none"> Replace. | Every 4 years | | | | | |
| 8 | * Brake fluid | <ul style="list-style-type: none"> Change. | Every 2 years | | | | | |
| 9 | * Wheels | <ul style="list-style-type: none"> Check runout and for damage. Replace if necessary. | | √ | √ | √ | √ | |
| 10 | * Tires | <ul style="list-style-type: none"> Check tread depth and for damage. Replace if necessary. Check air pressure. Correct if necessary. | | √ | √ | √ | √ | √ |

Periodic maintenance and adjustment

| NO. | ITEM | CHECK OR MAINTENANCE JOB | ODOMETER READING | | | | | ANNUAL CHECK |
|-----|---------------------------|---|--|--------------------|---------------------|---------------------|---------------------|--------------|
| | | | 1000 km (600 mi) | 10000 km (6000 mi) | 20000 km (12000 mi) | 30000 km (18000 mi) | 40000 km (24000 mi) | |
| 11 | * Wheel bearings | <ul style="list-style-type: none"> Check bearing for looseness or damage. | | √ | √ | √ | √ | |
| 12 | * Swingarm pivot bearings | <ul style="list-style-type: none"> Check operation and for excessive play. | | √ | √ | √ | √ | |
| | | <ul style="list-style-type: none"> Lubricate with lithium-soap-based grease. | Every 50000 km (30000 mi) | | | | | |
| 13 | Drive chain | <ul style="list-style-type: none"> Check chain slack, alignment and condition. Adjust and lubricate chain with a special O-ring chain lubricant thoroughly. | Every 1000 km (600 mi) and after washing the motorcycle, riding in the rain or riding in wet areas | | | | | |
| 14 | * Steering bearings | <ul style="list-style-type: none"> Check bearing assemblies for looseness. | √ | √ | | √ | | |
| | | <ul style="list-style-type: none"> Moderately repack with lithium-soap-based grease. | | | √ | | √ | |
| 15 | * Chassis fasteners | <ul style="list-style-type: none"> Make sure that all nuts, bolts and screws are properly tightened. | | √ | √ | √ | √ | √ |
| 16 | Brake lever pivot shaft | <ul style="list-style-type: none"> Lubricate with silicone grease. | | √ | √ | √ | √ | √ |
| 17 | Brake pedal pivot shaft | <ul style="list-style-type: none"> Lubricate with lithium-soap-based grease. | | √ | √ | √ | √ | √ |
| 18 | Clutch lever pivot shaft | <ul style="list-style-type: none"> Lubricate with lithium-soap-based grease. | | √ | √ | √ | √ | √ |
| 19 | Shift pedal pivot shaft | <ul style="list-style-type: none"> Lubricate with lithium-soap-based grease. | | √ | √ | √ | √ | √ |
| 20 | Sidestand | <ul style="list-style-type: none"> Check operation. Lubricate with molybdenum disulfide grease. | | √ | √ | √ | √ | √ |

Periodic maintenance and adjustment

| NO. | ITEM | CHECK OR MAINTENANCE JOB | ODOMETER READING | | | | | ANNUAL CHECK |
|-----|--|---|---------------------|-----------------------|------------------------|------------------------|------------------------|--------------|
| | | | 1000 km (600 mi) | 10000 km (6000 mi) | 20000 km (12000 mi) | 30000 km (18000 mi) | 40000 km (24000 mi) | |
| 21 | * Sidestand switch | <ul style="list-style-type: none"> • Check operation and replace if necessary. | √ | √ | √ | √ | √ | √ |
| 22 | * Front fork | <ul style="list-style-type: none"> • Check operation and for oil leakage. • Replace if necessary. | | √ | √ | √ | √ | |
| 23 | * Shock absorber assembly | <ul style="list-style-type: none"> • Check operation and for oil leakage. • Replace if necessary. | | √ | √ | √ | √ | |
| 24 | * Rear suspension relay arm and connecting arm pivoting points | <ul style="list-style-type: none"> • Check operation. | | √ | √ | √ | √ | |
| 25 | * Engine oil | <ul style="list-style-type: none"> • Change (warm engine before draining). • Check oil level and vehicle for oil leakage. | √ | √ | √ | √ | √ | √ |
| 26 | * Engine oil filter cartridge | <ul style="list-style-type: none"> • Replace. | √ | | √ | | √ | |
| 27 | * Cooling system | <ul style="list-style-type: none"> • Check coolant level and vehicle for coolant leakage. | | √ | √ | √ | √ | √ |
| | | <ul style="list-style-type: none"> • Change. | Every 3 years | | | | | |
| 28 | * Front and rear brake switches | <ul style="list-style-type: none"> • Check operation. | √ | √ | √ | √ | √ | √ |
| 29 | * Moving parts and cables | <ul style="list-style-type: none"> • Lubricate. | | √ | √ | √ | √ | √ |

Periodic maintenance and adjustment

| NO. | ITEM | CHECK OR MAINTENANCE JOB | ODOMETER READING | | | | | ANNUAL CHECK |
|------|--|---|---------------------|-----------------------|------------------------|------------------------|------------------------|--------------|
| | | | 1000 km (600 mi) | 10000 km (6000 mi) | 20000 km (12000 mi) | 30000 km (18000 mi) | 40000 km (24000 mi) | |
| 30 * | Throttle grip housing and cable | <ul style="list-style-type: none"> • Check operation and free play. • Adjust the throttle cable free play if necessary. • Lubricate the throttle grip housing and cable. | | √ | √ | √ | √ | √ |
| 31 * | Lights, signals and switches | <ul style="list-style-type: none"> • Check operation. • Adjust headlight beam. | √ | √ | √ | √ | √ | √ |

EAU72800

TIP

7

- Air filter
 - This model's air filter is equipped with a disposable oil-coated paper element, which must not be cleaned with compressed air to avoid damaging it.
 - The air filter element needs to be replaced more frequently when riding in unusually wet or dusty areas.
- Hydraulic brake service
 - Regularly check and, if necessary, correct the brake fluid level.
 - Every two years replace the internal components of the brake master cylinders and calipers, and change the brake fluid.
 - Replace the brake hoses every four years and if cracked or damaged.

Checking the spark plugs

EAU19653


The spark plugs are important engine components, which should be checked periodically, preferably by a Yamaha dealer. Since heat and deposits will cause any spark plug to slowly erode, they should be removed and checked in accordance with the periodic maintenance and lubrication chart. In addition, the condition of the spark plugs can reveal the condition of the engine.

The porcelain insulator around the center electrode of each spark plug should be a medium-to-light tan (the ideal color when the vehicle is ridden normally), and all spark plugs installed in the engine should have the same color. If any spark plug shows a distinctly different color, the engine could be operating improperly. Do not attempt to diagnose such problems yourself. Instead, have a Yamaha dealer check the vehicle.

If a spark plug shows signs of electrode erosion and excessive carbon or other deposits, it should be replaced.

Specified spark plug:
NGK/LMAR8A-9

Before installing a spark plug, the spark plug gap should be measured with a wire thickness gauge and, if necessary, adjusted to specification.

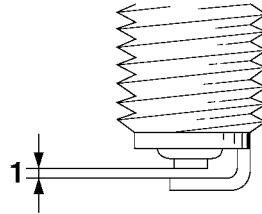

1. Spark plug gap

Spark plug gap:
0.8–0.9 mm (0.031–0.035 in)

Clean the surface of the spark plug gasket and its mating surface, and then wipe off any grime from the spark plug threads.

Tightening torque:
Spark plug:
13 N·m (1.3 kgf·m, 9.6 lb·ft)

TIP

If a torque wrench is not available when installing a spark plug, a good estimate of the correct torque is 1/4–1/2 turn past finger tight. However, the spark plug should be tightened to the specified torque as soon as possible.

ECA10841


NOTICE

Do not use any tools to remove or install the spark plug cap, otherwise the ignition coil coupler may get damaged. The spark plug cap may be difficult to remove because the rubber seal on the end of the cap fits tightly. To remove the spark plug cap, simply twist it back and forth while pulling it out; to install it, twist it back and forth while pushing it in.

Periodic maintenance and adjustment

Canister

EAU36113

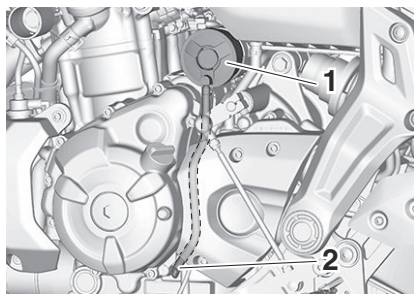

1. Canister
2. Canister breather hose

This model is equipped with a canister to prevent the discharging of fuel vapor into the atmosphere. Before operating this vehicle, make sure to check the following:

- Check each hose connection.
- Check each hose and canister for cracks or damage. Replace if damaged.
- Make sure that the canister breather is not blocked, and if necessary, clean it.

Engine oil

EAU99871

The engine oil level should be checked regularly. In addition, the oil must be changed and the oil filter cartridge replaced at the intervals specified in the periodic maintenance chart.

Recommended engine oil:

See page 9-1.

Oil quantity:

Oil change:

2.30 L (2.43 US qt, 2.02 Imp. qt)

With oil filter removal:

2.60 L (2.75 US qt, 2.29 Imp. qt)


ECA11621

NOTICE

- **In order to prevent clutch slippage (since the engine oil also lubricates the clutch), do not mix any chemical additives. Do not use oils with a diesel specification of “CD” or oils of a higher quality than specified. In addition, do not use oils labeled “ENERGY CONSERVING II” or higher.**
- **Make sure that no foreign material enters the crankcase.**

To check the engine oil level

1. Place the vehicle on a level surface and hold it in an upright position. A slight tilt to the side can result in a false reading.
2. Start the engine, warm it up for several minutes, and then turn it off.
3. Wait a few minutes for the oil level to settle for an accurate reading, and then check the oil level through the engine oil level check window located at the bottom-left side of the crankcase.

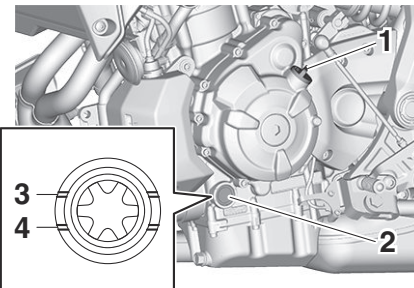

1. Engine oil filler cap
2. Engine oil level check window
3. Maximum level mark
4. Minimum level mark


TIP

The engine oil should be between the minimum and maximum level marks.

4. If the engine oil is below the minimum level mark, add sufficient oil of the recommended type to raise it to the correct level.

TIP

Check the O-ring for damage, and replace it if necessary.

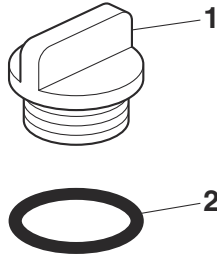

1. Engine oil filler cap
2. O-ring

To change the engine oil and the oil filter cartridge

Have a Yamaha dealer change the engine oil and the oil filter cartridge.

Why Yamalube

YAMALUBE oil is a Genuine YAMAHA Part born of the engineers' passion and belief that engine oil is an important liquid engine component. We form teams of specialists in the fields of mechanical engineering, chemistry, electronics and track testing, and have them develop the engine together with the oil it will use. Yamalube oils take full advantage of the base oil's qualities and blend in the ideal balance of additives to make sure the final oil clears our performance standards. Thus, Yamalube mineral, semisynthetic and synthetic oils have their own distinct characters and value. Yamaha's experience gained over many years of research and development into oil since the 1960's helps make Yamalube the best choice for your Yamaha engine.



Coolant

The coolant level should be checked regularly. In addition, the coolant must be changed at the intervals specified in the periodic maintenance chart.

Recommended coolant:

YAMALUBE coolant

Coolant quantity:

- Coolant reservoir (max level mark):
0.25 L (0.26 US qt, 0.22 Imp. qt)
Radiator (including all routes):
1.60 L (1.69 US qt, 1.41 Imp. qt)

TIP


If genuine Yamaha coolant is not available, use an ethylene glycol antifreeze containing corrosion inhibitors for aluminum engines and mix with distilled water at a 1:1 ratio.

To check the coolant level

Since the coolant level varies with engine temperature, check when the engine is cold.


1. Park the vehicle on a level surface.
2. With the vehicle in an upright position, look at the coolant level in the reservoir.

Periodic maintenance and adjustment

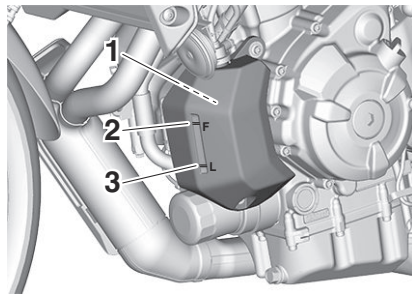

1. Coolant reservoir
2. Maximum level mark
3. Minimum level mark

3. If the coolant is at or below the minimum level mark, remove the coolant reservoir cap. **WARNING! Remove only the coolant reservoir cap. Never attempt to remove the radiator cap when the engine is hot.**^[EWA15162]

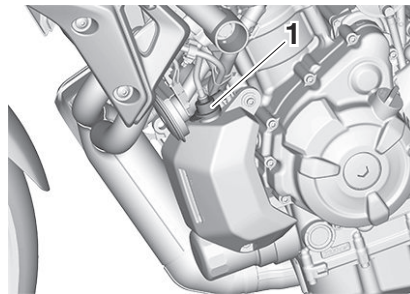

1. Coolant reservoir cap

4. Add coolant to the maximum level mark. **NOTICE: If coolant is not available, use distilled water or soft tap water instead. Do not use hard water or salt water since it is harmful to the engine. If water has been used instead of coolant, replace it with coolant as soon as possible, otherwise the cooling system will not be protected against frost and corrosion. If water has been added to the coolant, have a Yamaha dealer check the anti-freeze content of the coolant as soon as possible, otherwise the effectiveness of the coolant will be reduced.**^[ECA10473]

5. Install the coolant reservoir cap.

EAU33032

Changing the coolant

The coolant must be changed at the intervals specified in the periodic maintenance and lubrication chart. Have a Yamaha dealer change the coolant. **WARNING! Never attempt to remove the radiator cap when the engine is hot.**^[EWA10382]


Replacing the air filter element and cleaning the check hose

EAU60451

The air filter element should be replaced at the intervals specified in the periodic maintenance and lubrication chart. Have a Yamaha dealer replace the air filter element more frequently if you are riding in unusually wet or dusty areas. However, the air filter check hose can be easily reached and should be frequently checked and cleaned if necessary.

To clean the air filter check hose

1. Remove the air filter check hose under the air filter case.

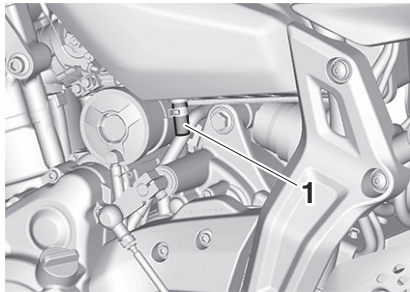

1. Air filter check hose

2. Clean and then install the hose.

Checking the engine idling speed

EAU44735

Check the engine idling speed and, if necessary, have it corrected by a Yamaha dealer.


Engine idling speed:
1250–1450 r/min

Periodic maintenance and adjustment

EAU21386

Checking the throttle grip free play

Measure the throttle grip free play as shown.

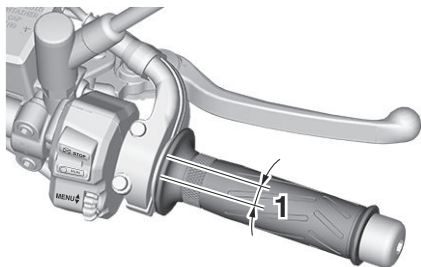

1. Throttle grip free play

Throttle grip free play:

3.0–5.0 mm (0.12–0.20 in)

Periodically check the throttle grip free play and, if necessary, have a Yamaha dealer adjust it.

EAU21403

Valve clearance

The valves are an important engine component, and since valve clearance changes with use, they must be checked and adjusted at the intervals specified in the periodic maintenance chart. Unadjusted valves can result in improper air-fuel mixture, engine noise, and eventually engine damage. To prevent this from occurring, have your Yamaha dealer check and adjust the valve clearance at regular intervals.

TIP

This service must be performed when the engine is cold.

EAU64412

Tires

Tires are the only contact between the vehicle and the road. Safety in all conditions of riding depends on a relatively small area of road contact. Therefore, it is essential to maintain the tires in good condition at all times and replace them at the appropriate time with the specified tires.

Tire air pressure

The tire air pressure should be checked and, if necessary, adjusted before each ride.

EWA10504

WARNING

Operation of this vehicle with improper tire pressure may cause severe injury or death from loss of control.

- The tire air pressure must be checked and adjusted on cold tires (i.e., when the temperature of the tires equals the ambient temperature).
- The tire air pressure must be adjusted in accordance with the riding speed and with the total

weight of rider, passenger, cargo, and accessories approved for this model.

Cold tire air pressure:

1 person:

Front:

225 kPa (2.25 kgf/cm², 33 psi)

Rear:

250 kPa (2.50 kgf/cm², 36 psi)

2 persons:

Front:

225 kPa (2.25 kgf/cm², 33 psi)

Rear:

250 kPa (2.50 kgf/cm², 36 psi)

Maximum load:

Vehicle:

171 kg (377 lb)

The vehicle's maximum load is the combined weight of the rider, passenger, cargo, and any accessories.


EWA10512



WARNING

Never overload your vehicle. Operation of an overloaded vehicle could cause an accident.

Tire inspection

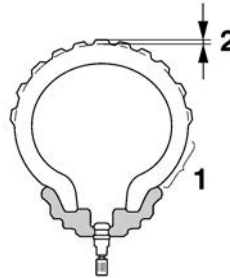

1. Tire sidewall
2. Tire tread depth

The tires must be checked before each ride. If the center tread depth reaches the specified limit, if the tire has a nail or glass fragments in it, or if the sidewall is cracked, have a Yamaha dealer replace the tire immediately.

Minimum tire tread depth (front and rear):

1.6 mm (0.06 in)

TIP

The tire tread depth limits may differ from country to country. Always comply with the local regulations.




WARNING

- Have a Yamaha dealer replace excessively worn tires. Besides being illegal, operating the vehicle with excessively worn tires decreases riding stability and can lead to loss of control.
- The replacement of all wheel and brake-related parts, including the tires, should be left to a Yamaha dealer, who has the necessary professional knowledge and experience to do so.
- Ride at moderate speeds after changing a tire since the tire surface must first be “broken in” for it to develop its optimal characteristics.

Periodic maintenance and adjustment

EWA10601

Tire information

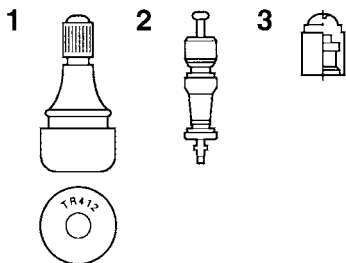

1. Tire air valve
2. Tire air valve core
3. Tire air valve cap with seal

This model is equipped with tubeless tires and tire air valves.

Tires age, even if they have not been used or have only been used occasionally. Cracking of the tread and sidewall rubber, sometimes accompanied by carcass deformation, is an evidence of ageing. Old and aged tires shall be checked by tire specialists to ascertain their suitability for further use.

EWA10902

⚠ WARNING

- The front and rear tires should be of the same make and de-

sign, otherwise the handling characteristics of the motorcycle may be different, which could lead to an accident.

- Always make sure that the valve caps are securely installed to prevent air pressure leakage.
- Use only the tire valves and valve cores listed below to avoid tire deflation during a ride.

After extensive tests, only the tires listed below have been approved for this model by Yamaha.

Front tire:

Size:
120/70 ZR 17M/C(58W)
Manufacturer/model:
MICHELIN/ROAD 5

Rear tire:

Size:
180/55 ZR 17M/C(73W)
Manufacturer/model:
MICHELIN/ROAD 5

FRONT and REAR:

Tire air valve:
TR412
Valve core:
#9100 (original)

⚠ WARNING

This motorcycle is fitted with super-high-speed tires. Note the following points in order to make the most efficient use of these tires.

- Use only the specified replacement tires. Other tires may run the danger of bursting at super high speeds.
- Brand-new tires can have a relatively poor grip on certain road surfaces until they have been “broken in”. Therefore, it is advisable before doing any high-speed riding to ride conservatively for approximately 100 km (60 mi) after installing a new tire.
- The tires must be warmed up before a high-speed run.
- Always adjust the tire air pressure according to the operating conditions.

EAU21963

EAU33893


Cast wheels

To maximize the performance, durability, and safe operation of your vehicle, note the following points regarding the specified wheels.

- The wheel rims should be checked for cracks, bends, warpage or other damage before each ride. If any damage is found, have a Yamaha dealer replace the wheel. Do not attempt even the smallest repair to the wheel. A deformed or cracked wheel must be replaced.
- The wheel should be balanced whenever either the tire or wheel has been changed or replaced. An unbalanced wheel can result in poor performance, adverse handling characteristics, and a shortened tire life.

Adjusting the clutch lever free play

Measure the clutch lever free play as shown.

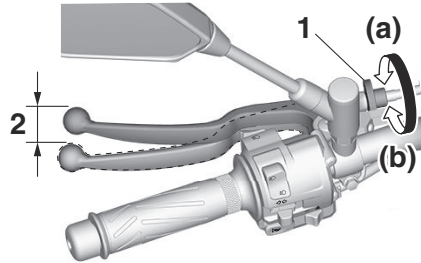

1. Clutch lever free play adjusting bolt
2. Clutch lever free play

Clutch lever free play:
5.0–10.0 mm (0.20–0.39 in)


Periodically check the clutch lever free play and, if necessary, adjust it as follows.

To increase the clutch lever free play, turn the clutch lever free play adjusting bolt at the clutch lever in direction (a). To decrease the clutch lever free play, turn the adjusting bolt in direction (b).

TIP

If the specified clutch lever free play cannot be obtained as described above, proceed as follows.

1. Fully turn the adjusting bolt at the clutch lever in direction (a) to loosen the clutch cable.
2. Loosen the locknut at the crankcase.

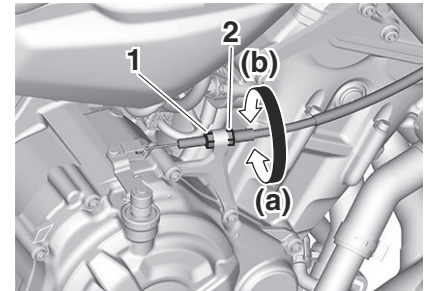


1. Locknut
2. Clutch lever free play adjusting nut
3. To increase the clutch lever free play, turn the clutch lever free play adjusting nut in direction (a). To decrease the clutch lever free play, turn the adjusting nut in direction (b).
4. Tighten the locknut.

Periodic maintenance and adjustment

Checking the brake lever free play

EAU37914

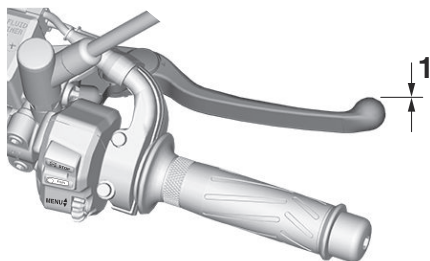

result in loss of control and an accident.

1. No brake lever free play

There should be no free play at the brake lever end. If there is free play, have a Yamaha dealer inspect the brake system.

EWA14212

WARNING

A soft or spongy feeling in the brake lever can indicate the presence of air in the hydraulic system. If there is air in the hydraulic system, have a Yamaha dealer bleed the system before operating the vehicle. Air in the hydraulic system will diminish the braking performance, which may re-

Brake light switches

EAU36505

The brake light should come on just before braking takes effect. The brake light is activated by switches connected to the brake lever and brake pedal. Since the brake light switches are components of the anti-lock brake system, they should only be serviced by a Yamaha dealer.


Checking the front and rear brake pads

EAU22393

The front and rear brake pads must be checked for wear at the intervals specified in the periodic maintenance and lubrication chart.

Front brake pads

EAU36892

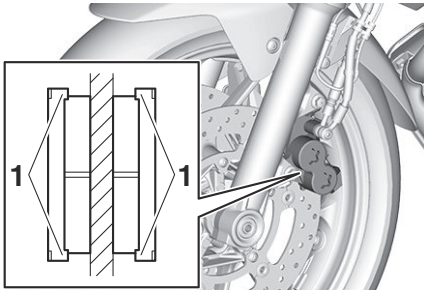


1. Brake pad wear indicator

Each front brake pad is provided with wear indicators, which allows you to check the brake pad wear without having to disassemble the brake. To check the brake pad wear, check the position of the wear indicators while applying the brake. If a brake pad has worn to the point that a wear indicator almost

touches the brake disc, have a Yamaha dealer replace the brake pads as a set.

Rear brake pads

EAU46292

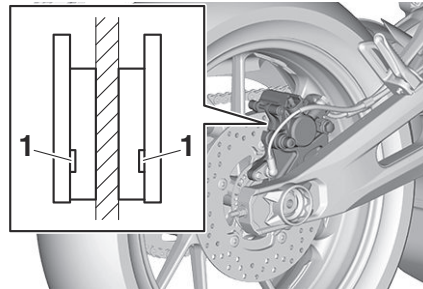

1. Brake pad wear indicator groove


Each rear brake pad is provided with wear indicator grooves, which allow you to check the brake pad wear without having to disassemble the brake. To check the brake pad wear, check the wear indicator grooves. If a brake pad has worn to the point that a wear indicator groove almost appears, have a Yamaha dealer replace the brake pads as a set.

Checking the brake fluid level

EAU40262

Before riding, check that the brake fluid is above the minimum level mark. Check the brake fluid level with the top of the reservoir level. Replenish the brake fluid if necessary.


Front brake

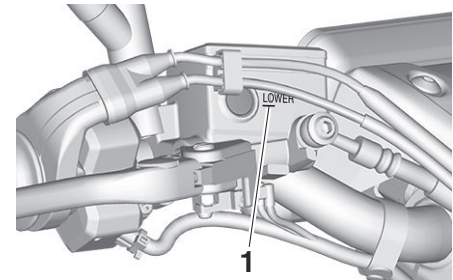

1. Minimum level mark

Periodic maintenance and adjustment

Rear brake

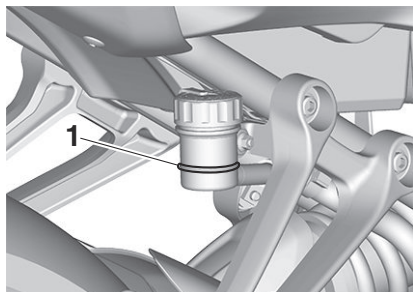

1. Minimum level mark

Specified brake fluid:
DOT 4

EWA16011

⚠ WARNING

Improper maintenance can result in loss of braking ability. Observe these precautions:

- Insufficient brake fluid may allow air to enter the brake system, reducing braking performance.
- Clean the filler cap before removing. Use only DOT 4 brake fluid from a sealed container.

- Use only the specified brake fluid; otherwise, the rubber seals may deteriorate, causing leakage.
- Refill with the same type of brake fluid. Adding a brake fluid other than DOT 4 may result in a harmful chemical reaction.
- Be careful that water or dust does not enter the brake fluid reservoir when refilling. Water will significantly lower the boiling point of the fluid and may result in vapor lock, and dirt may clog the ABS hydraulic unit valves.

brake system for leakage. If the brake fluid level goes down suddenly, have a Yamaha dealer check the cause before further riding.

NOTICE

Brake fluid may damage painted surfaces or plastic parts. Always clean up spilled fluid immediately.

As the brake pads wear, it is normal for the brake fluid level to gradually go down. A low brake fluid level may indicate worn brake pads and/or brake system leakage; therefore, be sure to check the brake pads for wear and the

ECA17641

Changing the brake fluid

EAU22734

Have a Yamaha dealer change the brake fluid every 2 years. In addition, have the seals of the master cylinders and brake calipers, as well as the brake hoses replaced at the intervals listed below or sooner if they are damaged or leaking.

- Brake seals: every 2 years
- Brake hoses: every 4 years

Drive chain slack

EAU22762

The drive chain slack should be checked before each ride and adjusted if necessary.

To check the drive chain slack


EAU60046

1. Place the motorcycle on the side-stand.

TIP

When checking and adjusting the drive chain slack, there should be no weight on the motorcycle.

2. Shift the transmission into the neutral position.
3. Push down on the drive chain under the end of the drive chain guard.
4. Measure distance A between the drive chain guard and the center of the chain as shown.

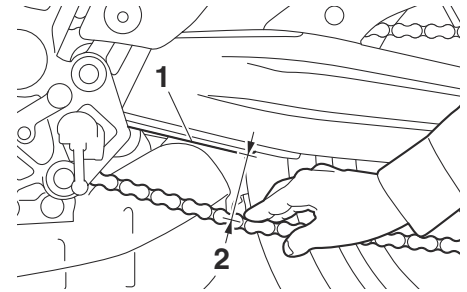

1. Drive chain guard
2. Distance A

Distance A:

51.0–56.0 mm (2.01–2.20 in)

5. If distance A is incorrect, adjust it as follows. **NOTICE: Improper drive chain slack will overload the engine as well as other vital parts of the motorcycle and can lead to chain slippage or breakage. If distance A is more than 58.0 mm (2.28 in), the chain can damage the frame, swingarm, and other parts. To prevent this from occurring, keep the drive chain slack within the specified limits.**^[ECA23070]


Periodic maintenance and adjustment

EAU59921

To adjust the drive chain slack


Consult a Yamaha dealer before adjusting the drive chain slack.

1. Loosen the locknut at each end of the swingarm, and then loosen the axle nut.

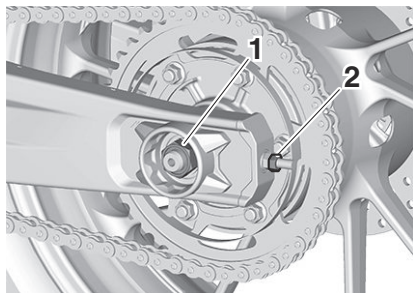

1. Axle nut
2. Locknut


2. To tighten the drive chain, turn the drive chain slack adjusting nut at each end of the swingarm in direction (a). To loosen the drive chain, turn the adjusting nut at each end of the swingarm in direction (b), and then push the rear wheel forward.

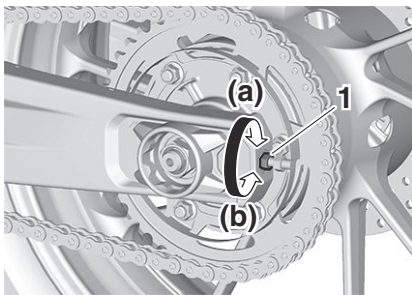

1. Drive chain slack adjusting nut

TIP

Using the alignment marks on each side of the swingarm, make sure that both drive chain slack adjusting plates are in the same position for proper wheel alignment.

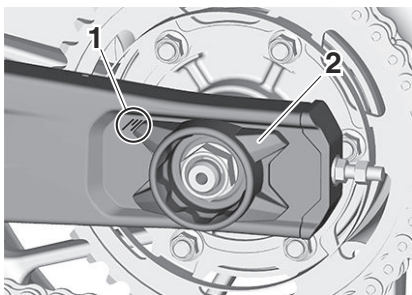

1. Alignment marks

2. Drive chain slack adjusting plate
3. Tighten the axle nut, and then tighten the locknuts to the specified torques.

Tightening torques:

- Axle nut:
105 N·m (10.5 kgf·m, 77 lb·ft)
- Locknut:
16 N·m (1.6 kgf·m, 12 lb·ft)

4. Make sure that the drive chain slack adjusting plates are in the same position, the drive chain slack is correct, and the drive chain moves smoothly.

Cleaning and lubricating the drive chain

EAU23027

The drive chain must be cleaned and lubricated at the intervals specified in the periodic maintenance and lubrication chart, otherwise it will quickly wear out, especially when riding in dusty or wet areas. Service the drive chain as follows.

ECA10584

NOTICE

The drive chain must be lubricated after washing the motorcycle, riding in the rain or riding in wet areas.

1. Clean the drive chain with a drive chain cleaner and a small soft brush. **NOTICE: To prevent damaging the O-rings, do not clean the drive chain with steam cleaners, high-pressure washers or inappropriate solvents.**

[ECA11122]

2. Wipe the drive chain dry.
3. Thoroughly lubricate the drive chain with a special O-ring chain lubricant. **NOTICE: Do not use**

engine oil or any other lubricants for the drive chain, as they may contain substances that could damage the O-rings.[ECA11112]

Checking and lubricating the cables

EAU23098

The operation of all control cables and the condition of the cables should be checked before each ride, and the cables and cable ends should be lubricated if necessary. If a cable is damaged or does not move smoothly, have a Yamaha dealer check or replace it. **WARNING! Damage to the outer housing of cables may result in internal rusting and cause interference with cable movement. Replace damaged cables as soon as possible to prevent unsafe conditions.**[EWA10712]

Recommended lubricant:

Yamaha cable lubricant or other suitable cable lubricant

Periodic maintenance and adjustment

Checking and lubricating the throttle grip and cable

EAU23115


The operation of the throttle grip should be checked before each ride. In addition, the cable should be lubricated by a Yamaha dealer at the intervals specified in the periodic maintenance chart. The throttle cable is equipped with a rubber cover. Make sure that the cover is securely installed. Even though the cover is installed correctly, it does not completely protect the cable from water entry. Therefore, use care not to pour water directly onto the cover or cable when washing the vehicle. If the cable or cover becomes dirty, wipe clean with a moist cloth.

Checking and lubricating the brake and shift pedals


EAU44276

The operation of the brake and shift pedals should be checked before each ride, and the pedal pivots should be lubricated if necessary.

Brake pedal

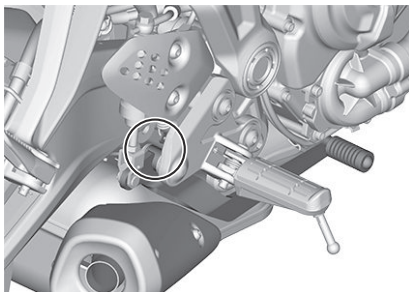

Shift pedal

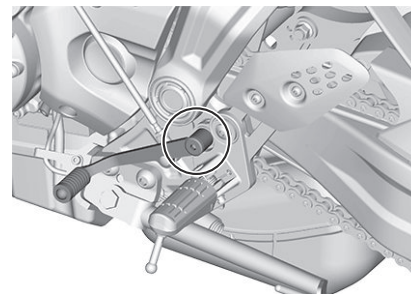

Recommended lubricant:
Lithium-soap-based grease


Periodic maintenance and adjustment

Checking and lubricating the brake and clutch levers


EAU23144

The operation of the brake and clutch levers should be checked before each ride, and the lever pivots should be lubricated if necessary.

Brake lever

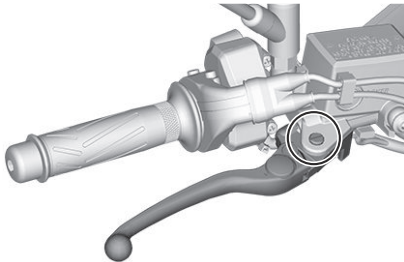

Clutch lever

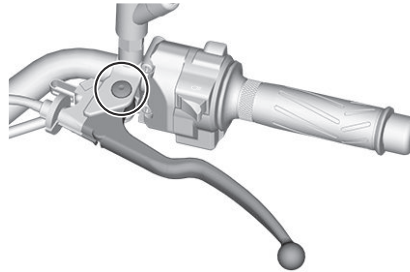


Recommended lubricants:

- Brake lever:
Silicone grease
- Clutch lever:
Lithium-soap-based grease

Checking and lubricating the sidestand

EAU89101

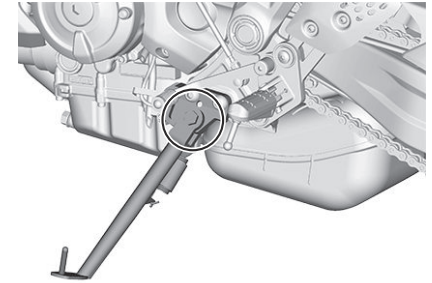

The operation of the sidestand should be checked before each ride, and the sidestand pivot and metal-to-metal contact surfaces should be lubricated if necessary.

WARNING


If the sidestand does not move up and down smoothly, have a Yamaha dealer check or repair it. Otherwise, the sidestand could contact the ground and distract the operator, resulting in a possible loss of control.

- #### Recommended lubricant:
- Molybdenum disulfide grease

Periodic maintenance and adjustment

Lubricating the swingarm pivots

EAUM1653

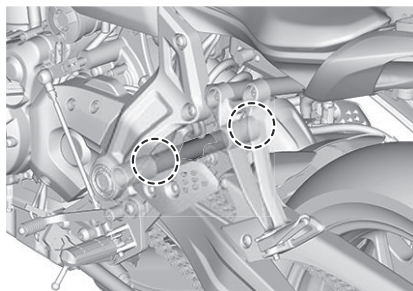

The swingarm pivots must be lubricated by a Yamaha dealer at the intervals specified in the periodic maintenance and lubrication chart.

Recommended lubricant:

Lithium-soap-based grease

Checking the front fork

EAU23273


The condition and operation of the front fork must be checked as follows at the intervals specified in the periodic maintenance and lubrication chart.

To check the condition

Check the inner tubes for scratches, damage and excessive oil leakage.

To check the operation

1. Place the vehicle on a level surface and hold it in an upright position. **WARNING! To avoid injury, securely support the vehicle so there is no danger of it falling over.**^[EWA10752]
2. While applying the front brake, push down hard on the handlebars several times to check if the front fork compresses and rebounds smoothly.

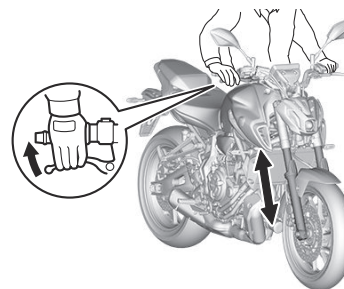

ECA10591

NOTICE


If any damage is found or the front fork does not operate smoothly, have a Yamaha dealer check or repair it.

EAU23285

Checking the steering


Worn or loose steering bearings may cause danger. Therefore, the operation of the steering must be checked as follows at the intervals specified in the periodic maintenance and lubrication chart.

1. Raise the front wheel off the ground. (See page 7-31.)
WARNING! To avoid injury, securely support the vehicle so there is no danger of it falling over.^[EWA10752]
2. Hold the lower ends of the front fork legs and try to move them forward and backward. If any free play can be felt, have a Yamaha dealer check or repair the steering.

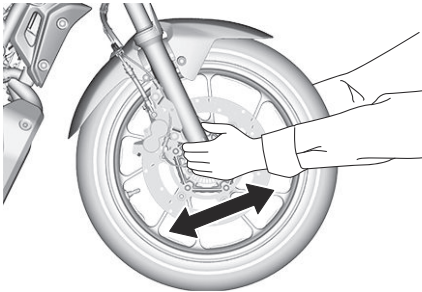

EAU23292


Checking the wheel bearings

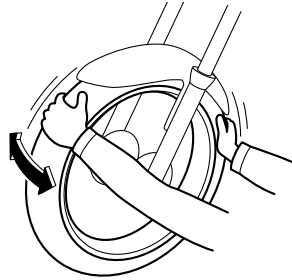

The front and rear wheel bearings must be checked at the intervals specified in the periodic maintenance and lubrication chart. If there is play in the wheel hub or if the wheel does not turn smoothly, have a Yamaha dealer check the wheel bearings.

EAU99861

Battery

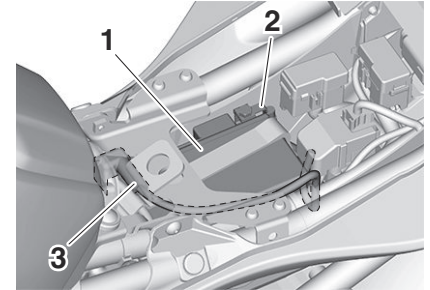

1. Battery
2. Negative battery lead (black)
3. Positive battery lead (red)

The battery is located under the rider seat. (See page 4-21.)

This model is equipped with a VRLA (Valve Regulated Lead Acid) battery. There is no need to check the electrolyte or to add distilled water. However, the battery lead connections need to be checked and, if necessary, tightened.

EWA10761

WARNING

- **Electrolyte is poisonous and dangerous since it contains sulfuric acid, which causes severe**

Periodic maintenance and adjustment

burns. Avoid any contact with skin, eyes or clothing and always shield your eyes when working near batteries. In case of contact, administer the following FIRST AID.

- **EXTERNAL:** Flush with plenty of water.
 - **INTERNAL:** Drink large quantities of water or milk and immediately call a physician.
 - **EYES:** Flush with water for 15 minutes and seek prompt medical attention.
 - Batteries produce explosive hydrogen gas. Therefore, keep sparks, flames, cigarettes, etc., away from the battery and provide sufficient ventilation when charging it in an enclosed space.
 - **KEEP THIS AND ALL BATTERIES OUT OF THE REACH OF CHILDREN.**
-

To charge the battery

Have a Yamaha dealer charge the battery as soon as possible if it seems to

have discharged. Keep in mind that the battery tends to discharge more quickly if the vehicle is equipped with optional electrical accessories.

ECA16522

NOTICE

To charge a VRLA (Valve Regulated Lead Acid) battery, a special (constant-voltage) battery charger is required. Using a conventional battery charger will damage the battery.

To store the battery

1. If the vehicle will not be used for more than one month, remove the battery, fully charge it, and then place it in a cool, dry place.
NOTICE: When removing the battery, be sure to turn the main switch off, then disconnect the negative lead before disconnecting the positive lead.^[ECA16304]
2. If the battery will be stored for more than two months, check it at least once a month and fully charge it if necessary.

3. Fully charge the battery before installation. **NOTICE: When installing the battery, be sure to turn the main switch off, then connect the positive lead before connecting the negative lead.**

[ECA16842]

4. After installation, make sure that the battery leads are properly connected to the battery terminals.

ECA16531


NOTICE

Always keep the battery charged. Storing a discharged battery can cause permanent battery damage.

To remove the battery

Accessing the battery requires removal of the seat bracket.

Periodic maintenance and adjustment

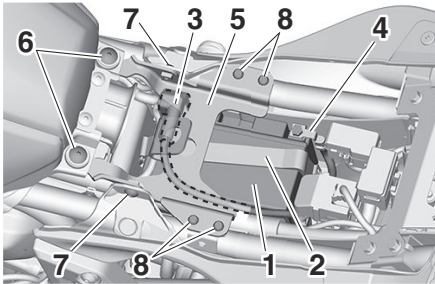

1. Battery
2. Band
3. Positive battery lead (red)
4. Negative battery lead (black)
5. Seat bracket
6. Bolt A
7. Bolt B
8. Bolt C

1. Turn the main switch off.
2. Remove the bolts A.
3. Remove the bolts B.
4. Remove the bolts C, and then remove the seat bracket.
5. Disconnect the negative battery lead (black). **NOTICE: When removing the battery, be sure to turn the main switch off, then disconnect the negative lead**

before disconnecting the positive lead.^[ECA16304]

6. Disconnect the positive battery lead (red).
7. Remove the battery band.
8. Remove the battery.

To install the battery

1. Make sure the main switch is off.
2. Install the battery in its original position.
3. Install the battery band.
4. Connect the positive battery lead (red). **NOTICE: When installing the battery, be sure to turn the main switch off, then connect the positive lead before connecting the negative lead.**^[ECA16842]
5. Connect the negative battery lead (black).
6. Install the seat bracket in its original position.
7. Install the bolts C.

Tightening torque:

Seat bracket bolt C:
7 N·m (0.7 kgf·m, 5.2 lb·ft)

8. Install the bolts B.

Tightening torque:

Seat bracket bolt B:
7 N·m (0.7 kgf·m, 5.2 lb·ft)

9. Install the bolts A.

Tightening torque:

Seat bracket bolt A:
7 N·m (0.7 kgf·m, 5.2 lb·ft)

Periodic maintenance and adjustment


EAU59876

Replacing the fuses


The main fuse and the fuse boxes, which contain the fuses for the individual circuits, are located under the rider seat. (See page 4-21.)

TIP

To access the main fuse, remove the starter relay cover as shown.

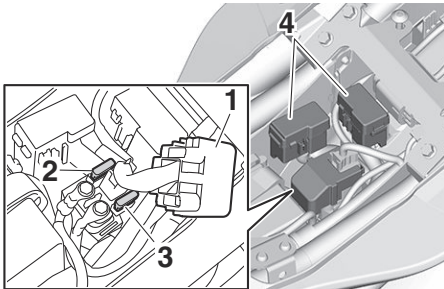

1. Starter relay cover
2. Main fuse
3. Spare main fuse
4. Fuse box

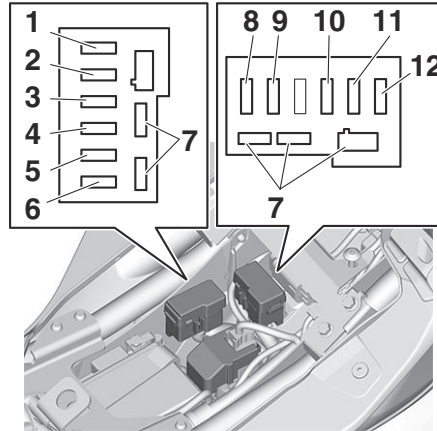

1. Radiator fan motor fuse
2. Backup fuse (for clock and immobilizer system)
3. Fuel injection system fuse
4. Headlight fuse
5. Signaling system fuse
6. Ignition fuse
7. Spare fuse
8. ABS solenoid fuse
9. ABS motor fuse
10. Accessory fuse
11. ABS ECU fuse
12. Terminal fuse 1

1. Turn the key to “OFF” and turn off the electrical circuit in question.
2. Remove the blown fuse, and then install a new fuse of the specified amperage. **WARNING! Do not use a fuse of a higher amperage rating than recommended to avoid causing extensive damage to the electrical system and possibly a fire.**^[EWA15132]

If a fuse is blown, replace it as follows.


Specified fuses:

- Main fuse:
30.0 A
- Terminal fuse 1:
3.0 A
- Headlight fuse:
7.5 A
- Signaling system fuse:
7.5 A
- Ignition fuse:
7.5 A
- Radiator fan motor fuse:
10.0 A
- ABS motor fuse:
30.0 A
- ABS solenoid fuse:
20.0 A
- ABS ECU fuse:
7.5 A
- Fuel injection system fuse:
10.0 A
- Backup fuse:
7.5 A
- Accessory fuse:
7.5 A

3. Turn the key to “ON” and turn on the electrical circuit in question to check if the device operates.
4. If the fuse immediately blows again, have a Yamaha dealer check the electrical system.

Vehicle lights

EAU80380

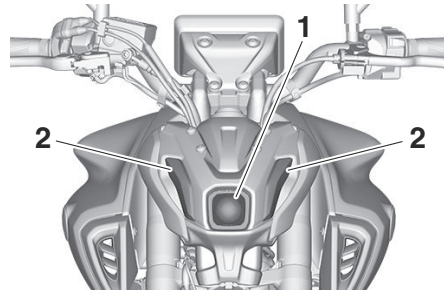

1. Headlight
2. Auxiliary light

Except for the license plate light bulb, this model's lights are all LED. If an LED light does not come on, check the fuses and then have a Yamaha dealer check the vehicle. If the license plate light does not come on, check and replace the bulb. (See page 7-30.)

ECA16581


NOTICE

Do not affix any type of tinted film or stickers to the headlight lens.

Replacing a license plate light bulb

EAU92270


1. Remove the license plate light unit by removing the bolts and collars.

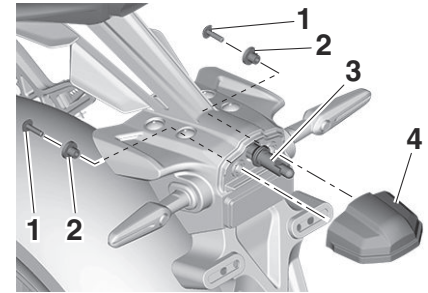

1. Bolt
2. Collar
3. License plate light bulb socket
4. License plate light unit

2. Remove the license plate light bulb socket (together with the bulb) by turning it counterclockwise, and then pulling it out.
3. Remove the burnt-out bulb by pulling it out.

Periodic maintenance and adjustment

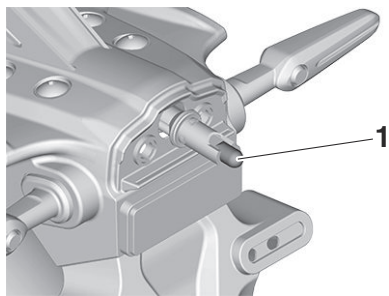


1. License plate light bulb

4. Insert a new bulb into the socket.
5. Install the socket (together with the bulb) by pushing it in, and then turning it clockwise until it stops.
6. Place the license plate light unit in the original position, and then install the collars and bolts.

Supporting the motorcycle

EAU67131

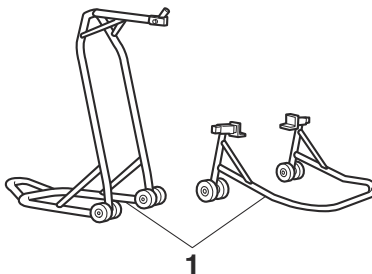

1. Maintenance stand (example)

Since this model is not equipped with a centerstand, use maintenance stands when removing the front or rear wheel or when performing other maintenance that requires the motorcycle to stand upright.

Check that the motorcycle is in a stable and level position before starting any maintenance.

EAU25872

Troubleshooting

Although Yamaha motorcycles receive a thorough inspection before shipment from the factory, trouble may occur during operation. Any problem in the fuel, compression, or ignition systems, for example, can cause poor starting and loss of power.

The following troubleshooting charts represent quick and easy procedures for checking these vital systems yourself. However, should your motorcycle require any repair, take it to a Yamaha dealer, whose skilled technicians have the necessary tools, experience, and know-how to service the motorcycle properly.

Use only genuine Yamaha replacement parts. Imitation parts may look like Yamaha parts, but they are often inferior, have a shorter service life and can lead to expensive repair bills.

EWA15142

WARNING

When checking the fuel system, do not smoke, and make sure there are no open flames or sparks in the area, including pilot lights from water

Periodic maintenance and adjustment


heaters or furnaces. Gasoline or gasoline vapors can ignite or explode, causing severe injury or property damage.

Periodic maintenance and adjustment


EAU86350

Troubleshooting chart


1. Fuel

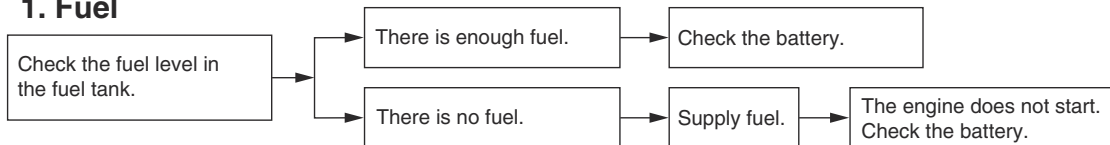


2. Battery

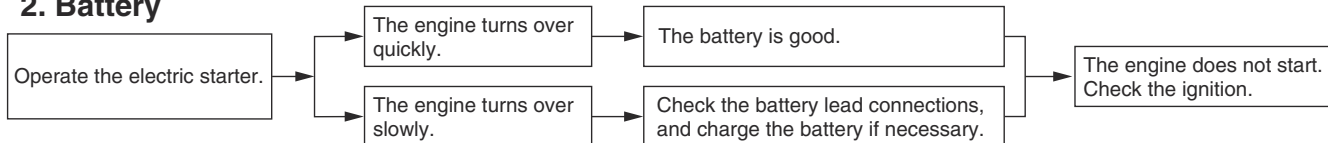

3. Ignition

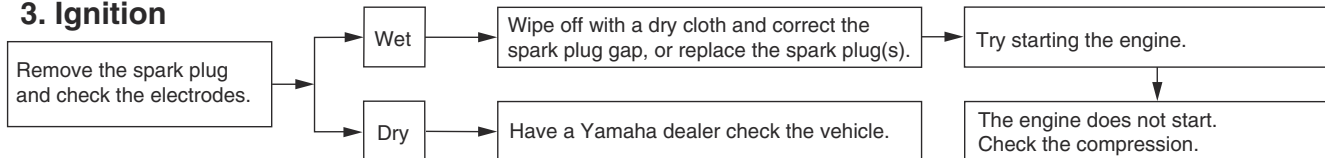

4. Compression

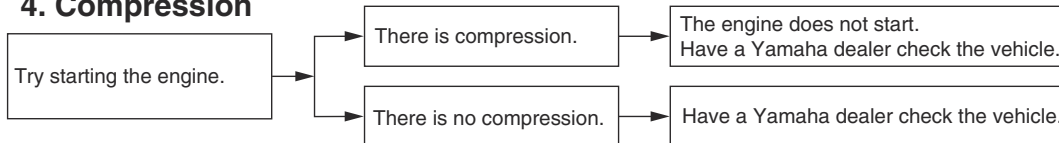

Periodic maintenance and adjustment


EAU86420

Engine overheating

EWAT1041

WARNING

- Do not remove the radiator cap when the engine and radiator are hot. Scalding hot fluid and steam may be blown out under pressure, which could cause serious injury. Be sure to wait until the engine has cooled.
- Place a thick rag, like a towel, over the radiator cap, and then slowly rotate the cap counterclockwise to the detent to allow any residual pressure to escape. When the hissing sound has stopped, press down on the cap while turning it counterclockwise, and then remove the cap.

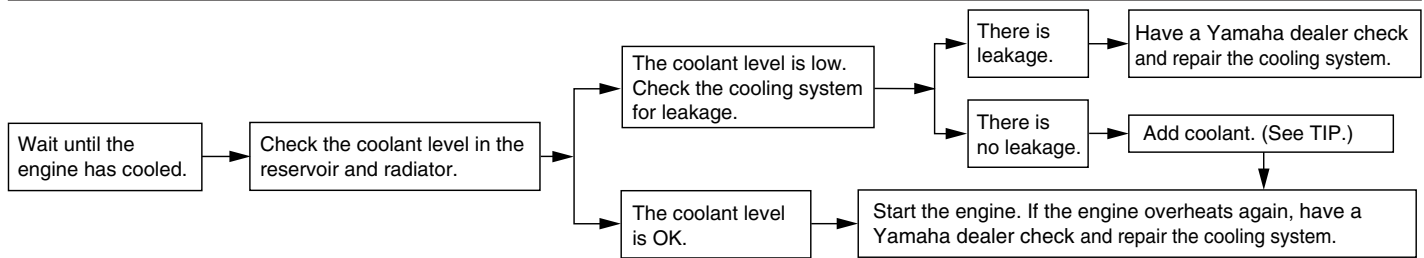

TIP

If coolant is not available, tap water can be temporarily used instead, provided that it is changed to the recommended coolant as soon as possible.

Motorcycle care and storage

Matte color caution

EAU37834

EAU83446

NOTICE

Some models are equipped with matte colored finished parts. Be sure to consult a Yamaha dealer for advice on what products to use before cleaning the vehicle. Using a brush, harsh chemical products or cleaning compounds when cleaning these parts will scratch or damage their surface. Wax also should not be applied to any matte colored finished parts.

ECA15193

Care

Frequent, thorough cleaning of the vehicle will not only enhance its appearance but also will improve its general performance and extend the useful life of many components. Washing, cleaning, and polishing will also give you a chance to inspect the condition of the vehicle more frequently. Be sure to wash the vehicle after riding in the rain or near the sea, because salt is corrosive to metals.

Special care in winter

ECA28181

NOTICE

In cold weather, when roads may be salted as a de-icing method, it's important to clean the vehicle thoroughly to remove road salt and avoid corrosion. Wheel spokes, bolts/nuts and other unpainted metal parts can be especially vulnerable to corrosion from road salt. Apply an anti-corrosion product to any vulnerable parts after washing and drying the vehicle.

TIP

- The roads of heavy snowfall areas may be sprayed with salt as a de-icing method. This salt can stay on the roads well into spring, so be sure to wash the underside and chassis parts after riding in such areas.
- Genuine Yamaha care and maintenance products are sold under the YAMALUBE brand in many markets worldwide.
- See your Yamaha dealer for additional cleaning tips.

ECA26280

NOTICE

Improper cleaning can cause cosmetic and mechanical damage. Do not use:

- high-pressure washers or steam-jet cleaners. Excessive water pressure may cause water seepage and deterioration of wheel bearings, brakes, transmission seals and electrical devices. Avoid high-pressure detergent applications

such as those available in coin-operated car washers.

- harsh chemicals, including strong acidic wheel cleaners, especially on spoke or magnesium wheels.
- harsh chemicals, abrasive cleaning compounds, or wax on matte-finished parts. Brushes can scratch and damage the matte-finish, use soft sponge or towel only.
- towels, sponges, or brushes contaminated with abrasive cleaning products or strong chemicals such as, solvents, gasoline, rust removers, brake fluid, or antifreeze, etc.

Before washing

1. Park the vehicle out of direct sunlight and allow it to cool. This will help avoid water spots.
2. Make sure all caps, covers, electrical couplers and connectors are tightly installed.
3. Cover the muffler end with a plastic bag and a strong rubber band.

4. Pre-soak stubborn stains like insects or bird droppings with a wet towel for a few minutes.
5. Remove road grime and oil stains with a quality degreasing agent and a plastic-bristle brush or sponge. **NOTICE: Do not use degreasing agent on areas requiring lubrication such as seals, gaskets, and wheel axles. Follow product instructions.**^[ECA26290]

Washing

1. Rinse off any degreaser and spray down the vehicle with a garden hose. Use only enough pressure to do the job. Avoid spraying water directly into the muffler, instrument panel, air inlet, or other inner areas such as underseat storage compartments.
2. Wash the vehicle with a quality automotive-type detergent mixed with cool water and a soft, clean towel or sponge. Use an old toothbrush or plastic-bristle brush for hard-to-reach places. **NOTICE: Use cold water if the vehicle has been exposed to salt. Warm wa-**

ter will increase salt's corrosive properties.^[ECA26301]

3. For windshield-equipped vehicles: Clean the windshield with a soft towel or sponge dampened with water and a pH neutral detergent. If necessary, use a high-quality windshield cleaner or polish for motorcycles. **NOTICE: Never use any strong chemicals to clean the windshield. Additionally, some cleaning compounds for plastic may scratch the windshield, so be sure to test all cleaning products before general application.**^[ECA26310]
4. Rinse off thoroughly with clean water. Be sure to remove all detergent residues, as they can be harmful to plastic parts.

After washing

1. Dry the vehicle with a chamois or absorbent towel, preferably microfiber terry cloth.
2. For drive chain-equipped models: Dry and then lubricate the drive chain to prevent rust.

Motorcycle care and storage

3. Use a chrome polish to shine chrome, aluminum, and stainless steel parts. Often the thermally induced discoloring of stainless steel exhaust systems can be removed through polishing.

4. Apply a corrosion protection spray on all metal parts including chrome or nickel-plated surfaces.

WARNING! Do not apply silicone or oil spray to seats, hand grips, rubber foot pegs or tire treads. Otherwise these parts will become slippery, which could cause loss of control. Thoroughly clean the surfaces of these parts before operating the vehicle.^[EWA20651]

5. Treat rubber, vinyl, and unpainted plastic parts with a suitable care product.

6. Touch up minor paint damage caused by stones, etc.

7. Wax all painted surfaces using a non-abrasive wax or use a detail spray for motorcycles.

8. When finished cleaning, start the engine and let it idle for several mi-

minutes to help dry any remaining moisture.

9. If the headlight lens has fogged up, start the engine and turn on the headlight to help remove the moisture.

10. Let the vehicle dry completely before storing or covering it.

ECA26320

NOTICE

- Do not apply wax to rubber or unpainted plastic parts.
- Do not use abrasive polishing compounds as they will wear away the paint.
- Apply sprays and wax sparingly. Wipe off excess afterwards.

EWA20660

WARNING

Contaminants left on the brakes or tires can cause loss of control.

- Make sure there is no lubricant or wax on the brakes or tires.
- If necessary, wash the tires with warm water and a mild detergent.

- If necessary, clean the brake discs and pads with brake cleaner or acetone.
 - Before riding at higher speeds, test the vehicle's braking performance and cornering behavior.
-

Storage

Always store the vehicle in a cool, dry place. If necessary, protect it against dust with a porous cover. Be sure the engine and the exhaust system are cool before covering the vehicle. If the vehicle often sits for weeks at a time between uses, the use of a quality fuel stabilizer is recommended after each fill-up.

EAU83472

NOTICE

ECA21170

- **Storing the vehicle in a poorly ventilated room or covering it with a tarp, while it is still wet, will allow water and humidity to seep in and cause rust.**
- **To prevent corrosion, avoid damp cellars, stables (because of the presence of ammonia) and areas where strong chemicals are stored.**

Long term storage

Before storing the vehicle long term (60 days or more):

1. Make all necessary repairs and perform any outstanding maintenance.
2. Follow all instructions in the Care section of this chapter.
3. Fill up the fuel tank, adding fuel stabilizer according to product instructions. Run the engine for 5 minutes to distribute treated fuel through the fuel system.
4. For vehicles equipped with a fuel cock: Turn the fuel cock lever to the off position.
5. For vehicles with a carburetor: To prevent fuel deposits from building up, drain the fuel in the carburetor float chamber into a clean container. Retighten the drain bolt and pour the fuel back into the fuel tank.
6. Use a quality engine fogging oil according to product instructions to protect internal engine components from corrosion. If engine fogging oil is not available, perform the following steps for each cylinder:
 - a. Remove the spark plug cap and spark plug.
 - b. Pour a teaspoonful of engine oil into the spark plug bore.
 - c. Install the spark plug cap onto the spark plug, and then place the spark plug on the cylinder head so that the electrodes are grounded. (This will limit sparking during the next step.)
 - d. Turn the engine over several times with the starter. (This will coat the cylinder wall with oil.)
WARNING! To prevent damage or injury from sparking, make sure to ground the spark plug electrodes while turning the engine over.
 - e. Remove the spark plug cap from the spark plug, and then install the spark plug and the spark plug cap.
7. Lubricate all control cables, pivots, levers and pedals, as well as the sidestand and centerstand (if equipped).
8. Check and correct the tire air pressure, and then lift the vehicle so that all wheels are off the ground. Otherwise, turn the wheels a little

[EWA10952]

Motorcycle care and storage

once a month in order to prevent the tires from becoming degraded in one spot.

9. Cover the muffler outlet with a plastic bag to prevent moisture from entering it.
10. Remove the battery and fully charge it, or attach a maintenance charger to keep the battery optimally charged. **NOTICE: Confirm that the battery and its charger are compatible. Do not charge a VRLA battery with a conventional charger.**^[ECA26330]

TIP

8

- If the battery will be removed, charge it once a month and store it in a temperate location between 0-30 °C (32-90 °F).
 - See page 7-26 for more information on charging and storing the battery.
-

Dimensions:

- Overall length:
2085 mm (82.1 in)
- Overall width:
780 mm (30.7 in)
- Overall height:
1115 mm (43.9 in)
- Seat height:
805 mm (31.7 in)
- Wheelbase:
1400 mm (55.1 in)
- Ground clearance:
140 mm (5.51 in)
- Minimum turning radius:
2.7 m (8.86 ft)

Weight:

- Curb weight:
184 kg (406 lb)

Engine:

- Combustion cycle:
4-stroke
- Cooling system:
Liquid cooled
- Valve train:
DOHC
- Cylinder arrangement:
Inline
- Number of cylinders:
2-cylinder
- Displacement:
689 cm³
- Bore × stroke:
80.0 × 68.6 mm (3.15 × 2.70 in)

- Starting system:
Electric starter

Engine oil:

- Recommended brand:



- SAE viscosity grades:
10W-40
- Recommended engine oil grade:
API service SG type or higher, JASO
standard MA
- Engine oil quantity:
Oil change:
2.30 L (2.43 US qt, 2.02 Imp.qt)
- With oil filter removal:
2.60 L (2.75 US qt, 2.29 Imp.qt)

Coolant quantity:

- Coolant reservoir (up to the maximum level
mark):
0.25 L (0.26 US qt, 0.22 Imp.qt)
- Radiator (including all routes):
1.60 L (1.69 US qt, 1.41 Imp.qt)

Fuel:

- Recommended fuel:
Unleaded gasoline (E10 acceptable)
- Octane number (RON):
90
- Fuel tank capacity:
14 L (3.7 US gal, 3.1 Imp.gal)
- Fuel reserve amount:
2.7 L (0.71 US gal, 0.59 Imp.gal)

Fuel injection:

- Throttle body:
ID mark:
1WS1

Drivetrain:

- Gear ratio:
1st:
2.846 (37/13)
- 2nd:
2.125 (34/16)
- 3rd:
1.632 (31/19)
- 4th:
1.300 (26/20)
- 5th:
1.091 (24/22)
- 6th:
0.964 (27/28)

Front tire:

- Type:
Tubeless
- Size:
120/70 ZR 17M/C(58W)
- Manufacturer/model:
MICHELIN/ROAD 5

Rear tire:

- Type:
Tubeless
- Size:
180/55 ZR 17M/C(73W)
- Manufacturer/model:
MICHELIN/ROAD 5

Specifications

Loading:

Maximum load:

171 kg (377 lb)

(Total weight of rider, passenger, cargo and accessories)

Auxiliary light:

LED

License plate light:

5.0 W

Front brake:

Type:

Hydraulic dual disc brake

Rear brake:

Type:

Hydraulic single disc brake

Front suspension:

Type:

Telescopic fork

Rear suspension:

Type:

Swingarm (link suspension)

Electrical system:

System voltage:

12 V

Battery:

Model:

YTZ10S/YTZ10

Voltage, capacity:

12 V, 8.6 Ah (10 HR)

Bulb wattage:

Headlight:

LED

Brake/tail light:

LED

Front turn signal light:

LED

Rear turn signal light:

LED

Identification numbers

Record the vehicle identification number, engine serial number, and the model label information in the spaces provided below. These identification numbers are needed when registering the vehicle with the authorities in your area and when ordering spare parts from a Yamaha dealer.


VEHICLE IDENTIFICATION NUMBER:

ENGINE SERIAL NUMBER:

MODEL LABEL INFORMATION:

EAU53562

Vehicle identification number

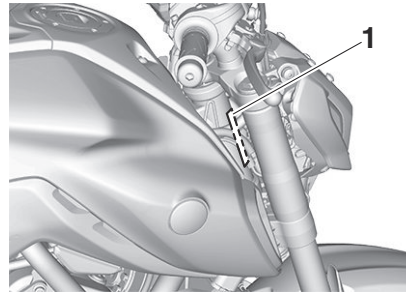

1. Vehicle identification number


The vehicle identification number is stamped into the steering head pipe. Record this number in the space provided.

TIP

The vehicle identification number is used to identify your motorcycle and may be used to register your motorcycle with the licensing authority in your area.

EAU26401

Engine serial number

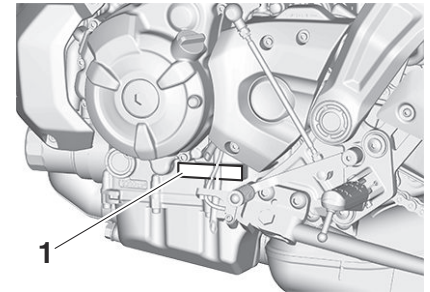


1. Engine serial number

The engine serial number is stamped into the crankcase.

EAU26442

Model label

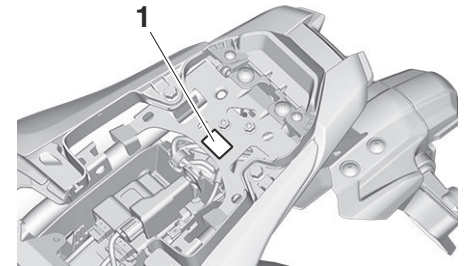

1. Model label


EAU26521

Consumer information

The model label is affixed to the frame under the passenger seat. (See page 4-21.) Record the information on this label in the space provided. This information will be needed when ordering spare parts from a Yamaha dealer.

Diagnostic connector

EAU69910

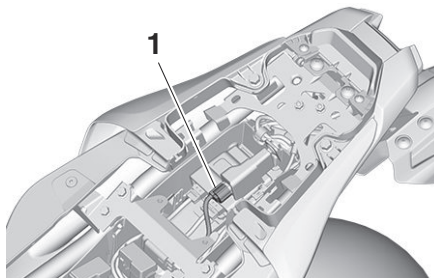

1. Diagnostic connector

The diagnostic connector is located as shown.

Use of your data

This is a brief summary of how Yamaha (Yamaha Motor Co. Ltd., and Yamaha Europe N.V.) uses your data. For more details, please go to the specific URL below for the Privacy Policy:

| Country | Language | URL |
|----------------|------------|---|
| Austria | German | https://www.yamaha-motor.eu/at/de/privacy/privacy-policy/ |
| Belgium | Dutch | https://www.yamaha-motor.eu/be/nl/privacy/privacy-policy/ |
| Belgium | French | https://www.yamaha-motor.eu/be/fr/privacy/privacy-policy/ |
| Bulgaria | Bulgarian | https://www.yamaha-motor.eu/bg/bg/privacy/privacy-policy/ |
| Czech Republic | Czech | https://www.yamaha-motor.eu/cz/cs/privacy/privacy-policy/ |
| Denmark | Danish | https://www.yamaha-motor.eu/dk/da/privacy/privacy-policy/ |
| Finland | Finnish | https://www.yamaha-motor.eu/fi/fi/privacy/privacy-policy/ |
| France | French | https://www.yamaha-motor.eu/fr/fr/privacy/privacy-policy/ |
| Germany | German | https://www.yamaha-motor.eu/de/de/privacy/privacy-policy/ |
| Greece | Greek | https://www.yamaha-motor.eu/gr/el/privacy/privacy-policy/ |
| Hungary | Hungarian | https://www.yamaha-motor.eu/hu/hu/privacy/privacy-policy/ |
| Italy | Italian | https://www.yamaha-motor.eu/it/it/privacy/privacy-policy/ |
| Ireland | English | https://www.yamaha-motor.eu/ie/en/privacy/privacy-policy/ |
| Netherlands | Dutch | https://www.yamaha-motor.eu/nl/nl/privacy/Privacybeleid/ |
| Norway | Norwegian | https://www.yamaha-motor.eu/no/nb/privacy/privacy-policy/ |
| Poland | Polish | https://www.yamaha-motor.eu/pl/pl/privacy/polityka-prywatnosci/ |
| Portugal | Portuguese | https://www.yamaha-motor.eu/pt/pt/privacy/privacy-policy/ |
| Romania | Romanian | https://www.yamaha-motor.eu/ro/ro/privacy/privacy-policy/ |
| Spain | Spanish | https://www.yamaha-motor.eu/es/es/privacy/privacy-policy/ |
| Sweden | Swedish | https://www.yamaha-motor.eu/se/sv/privacy/privacy-policy/ |

Consumer information

| Country | Language | URL |
|-------------|----------|---|
| Switzerland | German | https://www.yamaha-motor.eu/ch/de/privacy/privacy-policy/ |
| Switzerland | French | https://www.yamaha-motor.eu/ch/fr/privacy/privacy-policy/ |
| Turkey | Turkish | https://www.yamaha-motor.eu/tr/tr/privacy/privacy-policy/ |
| U.K. | English | https://www.yamaha-motor.eu/gb/en/privacy/privacy-policy/ |

What data we collect? and How we collect your data?

This vehicle collects three types of data through integrated Engine Control Units (ECU): (1) Vehicle Identification Number (VIN); (2) live data showing the performance of the vehicle such as engine/motor operating state, vehicle speed, mileage; and (3) other data showing the status of the vehicle such as diagnostic trouble code (DTC).

The collected data will be uploaded to server at Yamaha Motor Co., Ltd. by attaching a special Yamaha diagnostic tool to the vehicle, only when maintenance checks or service procedures are performed.

How will we use your data?

Yamaha use collected data from your vehicle, (1) to conduct adequate maintenance service including diagnostics, (2) to implement proper warranty claim judgement, (3) to conduct research and development of vehicle, (4) to provide and improve quality of products, features, and services, (5) to ensure our business purpose, and (6) to comply with requirements of laws and regulations.

How we share your data?

We may share your data with: (i)our subsidiaries, affiliates, and business partners; (ii) dealers in your country or region, and (iii) contractors within the scope necessary to achieve the purpose of use described above.

How to contact us

Yamaha Motor Co., Ltd., and Yamaha Motor Europe N.V. are joint data controller regarding your data collected. Any questions or complaints regarding the processing of your Personal Data can be submitted in writing to:

Yamaha Motor Europe NV/Digital Marketing & CRM
– PO Box 75033 – 1117 ZN Schiphol – The Netherlands.

Consumer information

The **SOLE PURPOSE** of above provided contact information is **TO RESPOND DATA PROCESSING INQUIRY AND OTHER KINDS OF INQUIRIES WILL NOT BE RESPONDED**. Please provide the following information for the proper handling of your inquiry: **(1) Your Name; (2) Your Email Address; (3) Your Country of Residence; and (4) Your VIN**. We will use your personal information provided only for the purpose of supporting your data processing inquiry.

Index

A

- ABS.....4-17
- ABS warning light..... 4-5
- Air filter element and check hose, re-placing and cleaning..... 7-12

B

- Battery..... 7-26
- Brake and clutch levers, checking and lubricating.....7-24
- Brake and shift pedals, checking and lubricating..... 7-23
- Brake fluid level, checking.....7-18
- Brake fluid, changing..... 7-20
- Brake lever..... 4-16
- Brake lever free play, checking..... 7-17
- Brake light switches.....7-17
- Brake pedal.....4-17

C

- Cables, checking and lubricating..... 7-22
- Canister..... 7-9
- Care..... 8-1
- Catalytic converter..... 4-21
- CCU (Communication Control Unit).....3-1
- Clutch lever.....4-16
- Clutch lever free play, adjusting..... 7-16
- Coolant.....7-10

D

- DC connectors..... 4-26
- Diagnostic connector..... 10-2
- Dimmer switch..... 4-3
- Display, main screen.....4-6
- Drive chain slack.....7-20
- Drive chain, cleaning and lubricating..... 7-22

E

- Engine break-in..... 6-1
- Engine idling speed, checking..... 7-12
- Engine oil.....7-9
- Engine overheating..... 7-34
- Engine serial number..... 10-1

F

- Front and rear brake pads, checking..... 7-18
- Front fork, checking..... 7-25
- Fuel.....4-19
- Fuel consumption, tips for reducing..... 6-4
- Fuel tank cap.....4-18
- Fuel tank overflow hose..... 4-20
- Fuses, replacing..... 7-29

G

- General malfunction indicator light..... 4-5

H

- Handlebar switches.....4-3
- Hazard indicator light.....4-5
- Hazard switch..... 4-4
- Helmet holding cable..... 4-23
- Horn switch.....4-4

I

- Identification numbers..... 10-1
- Ignition circuit cut-off system.....4-27
- Immobilizer system.....4-1
- Immobilizer system indicator light..... 4-5
- Indicator lights and warning lights..... 4-5

L

- License plate light bulb, replacing.....7-30
- Luggage strap holders..... 4-26

M

- Main switch/steering lock..... 4-2
- Maintenance and lubrication, periodic.....7-4

- Maintenance, emission control system.....7-3
- Malfunction indicator (MIL).....4-9
- Matte color, caution..... 8-1
- Menu system.....4-12
- Model label..... 10-1

P

- Parking.....6-4
- Part locations..... 2-1
- Pass switch.....4-3

Q

- Quick shifter (if equipped).....3-1

S

- Safety information..... 1-1
- Seats.....4-21
- Shift pedal..... 4-16
- Shifting.....6-3
- Shock absorber assembly, adjusting.....4-24
- Sidestand.....4-27
- Sidestand, checking and lubricating.....7-24
- Spark plugs, checking..... 7-8
- Special features.....3-1
- Specifications.....9-1
- Starting the engine.....6-2
- Steering, checking.....7-26
- Stop/Run/Start switch..... 4-4
- Storage..... 8-4
- Supporting the motorcycle.....7-31
- Swingarm pivots, lubricating..... 7-25

T

- Throttle grip and cable, checking and lubricating.....7-23
- Throttle grip free play, checking.....7-13
- Tires..... 7-13
- Tool kits.....7-2

| | |
|----------------------------|------|
| Troubleshooting..... | 7-31 |
| Troubleshooting chart..... | 7-33 |
| Turn signal switch..... | 4-4 |

U

| | |
|---------------------|------|
| Use, your data..... | 10-3 |
|---------------------|------|

V

| | |
|------------------------------------|------|
| Valve clearance..... | 7-13 |
| Vehicle identification number..... | 10-1 |
| Vehicle lights..... | 7-30 |

W

| | |
|-------------------------------|------|
| Wheel bearings, checking..... | 7-26 |
| Wheels..... | 7-16 |

Y

| | |
|---------------|------|
| Yamalube..... | 7-10 |
|---------------|------|



